
GABRIELLE

LUXO|Furniture

TV Unit

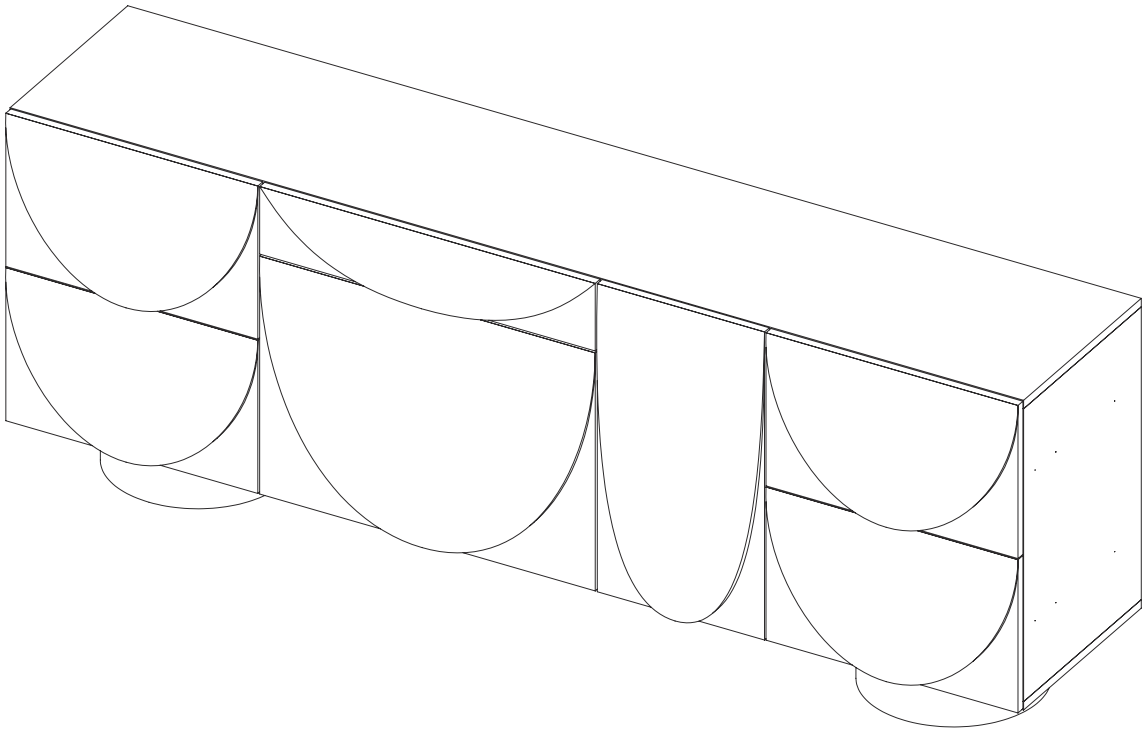

Assembly requires at least 2 persons


Extra tools you may need

USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT INVALIDATES ANY CLAIM AS IT MAY DAMAGE THE PRODUCT MAKING IT UNSAFE TO USE.

ASSEMBLY INSTRUCTIONS


THANK YOU FOR YOUR PURCHASE!

We hope you enjoy this product as much as we enjoyed making it!
We suggest you spend **5 minutes** in reading these tips
before assembling the unit. Strictly follow the instructions step by step.

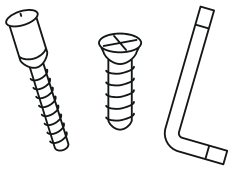


Tool Check

Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

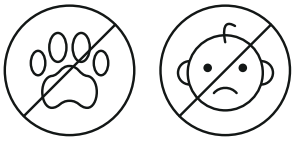


Safety Check

Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

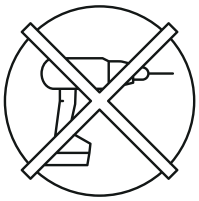

Do Not Use Power Tool

Do not use any power tool for assembly as it may damage the unit and make it unsafe to use. Use of any power tool will invalidate any claim you may have.

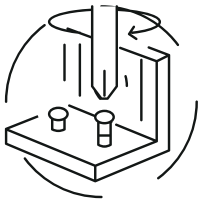

Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST


Please check if you have all the fittings and tools listed below.

A




HAT SCREW
116 PCS

B




ECCENTRIC HAT
116 PCS

C




DOOR HOLDER
2 PCS

D




LAYERED BOARD SUPPORT
4 PCS

E




HINGE
2 PCS

F




HINGE
2 PCS

G




∅3.5x14mm SCREW
112 PCS

H

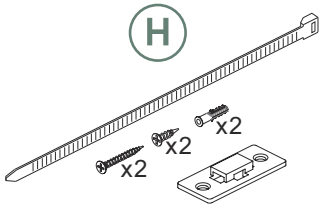

ANTI-TIP SAFETY KIT
2 PCS

J

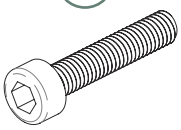

M8x40 BOLT
2 PCS

K



∅8 WASHER
2 PCS

L




ALLEN KEY
1 PC

M




SLIDE RAIL
10 PCS

N

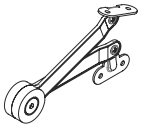


HINGE
2 PCS

P



IRON SHEET
2 PCS


Q




BACKPLATE BUCKLE
12 PCS

SLIDE INSTALLATION INSTRUCTIONS


Step 1

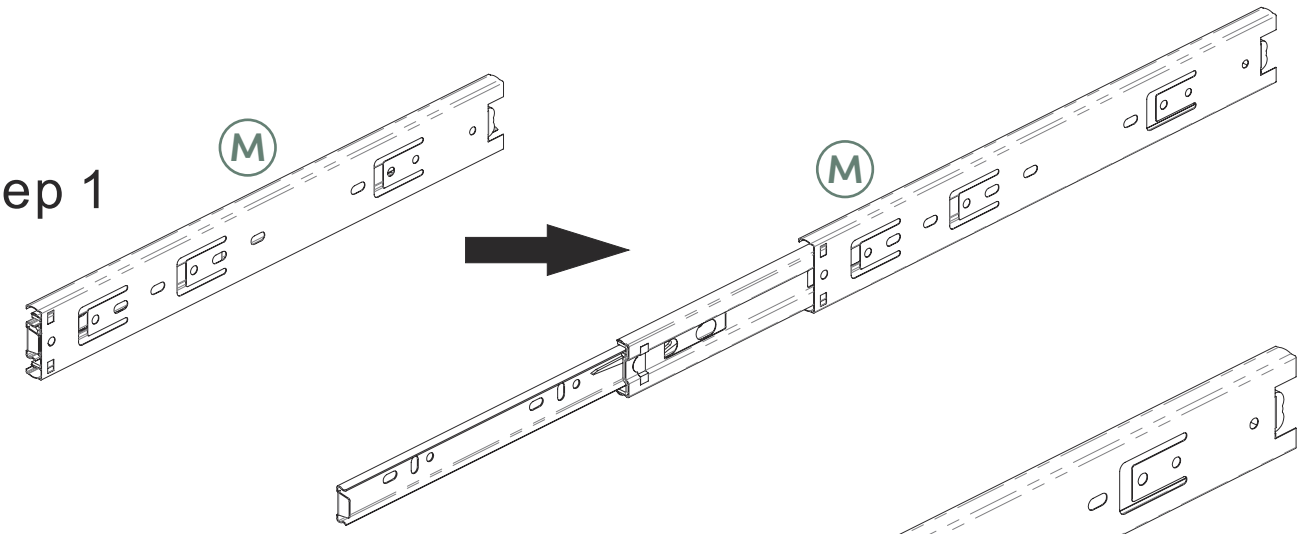


Step 2

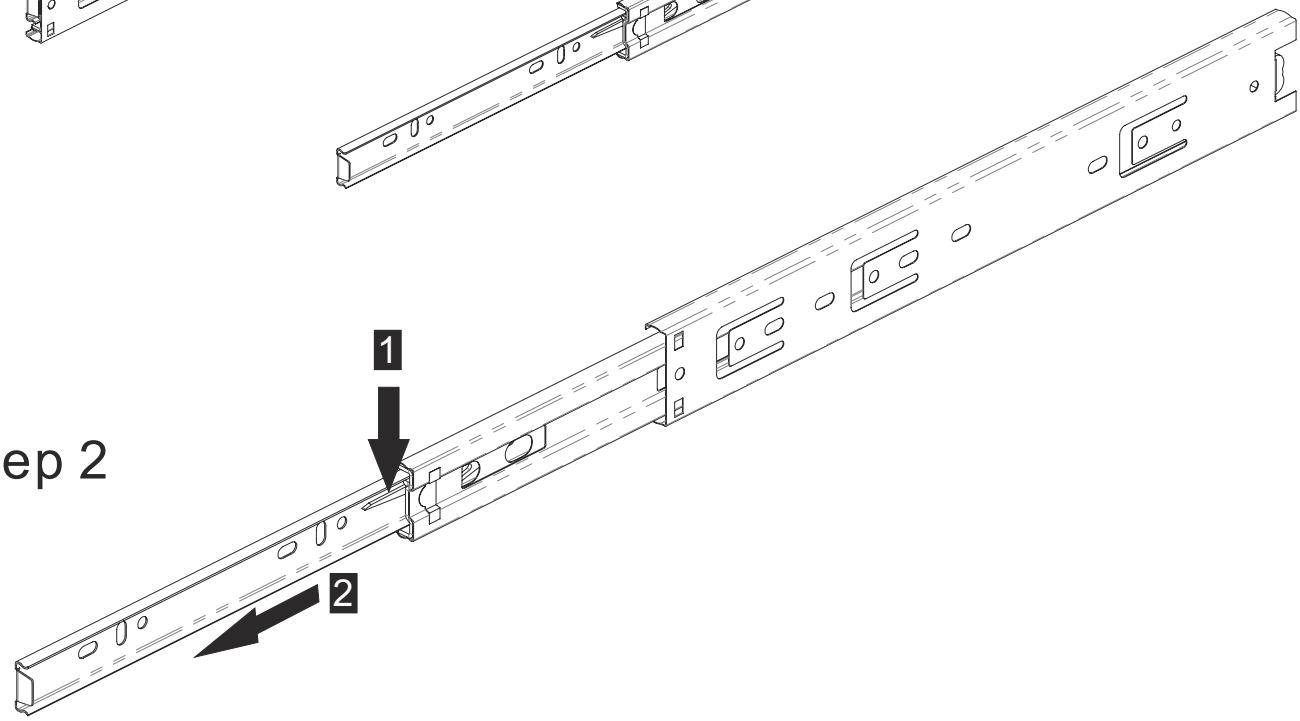


Step 3

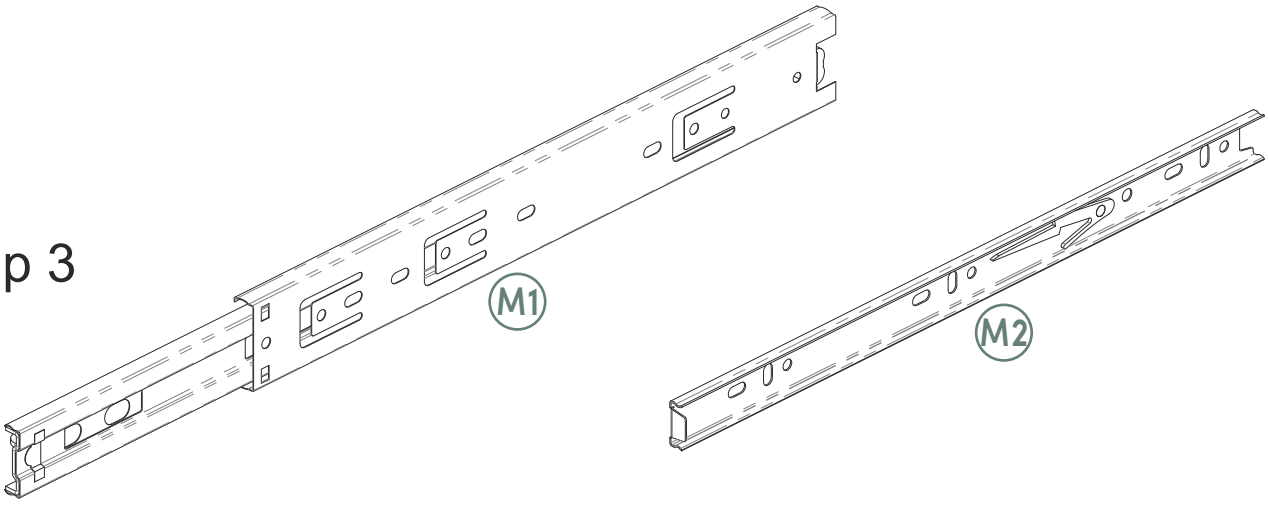


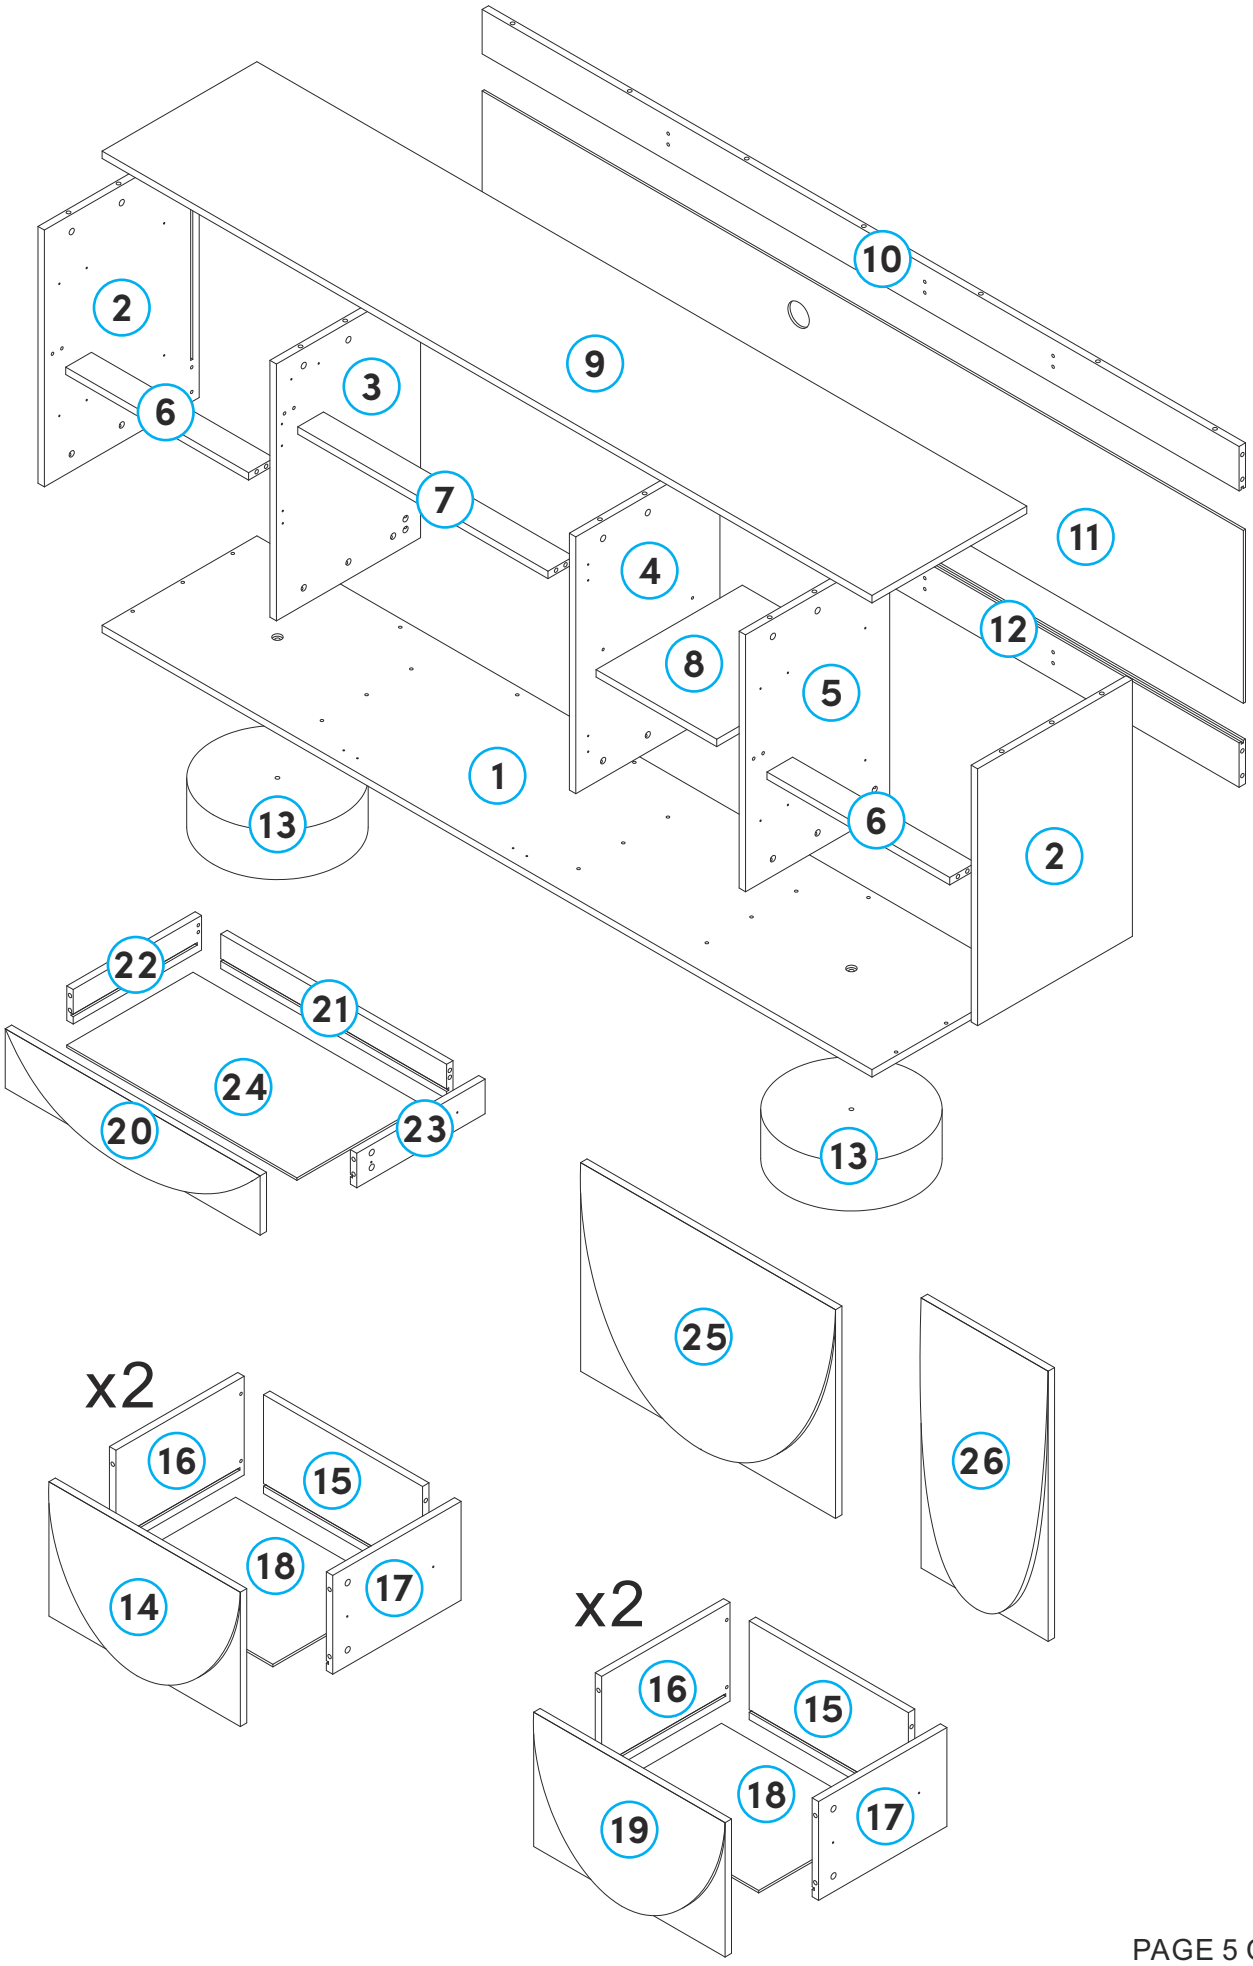
10
2
9
3
6
7
11
4
12
8
5
1
6
2
13
22
21
24
20
23
13
25
26
x2
16
15
18
14
17
x2
16
15
18
19
17


PARTS LIST

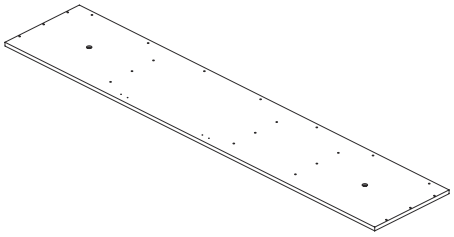


1 x1

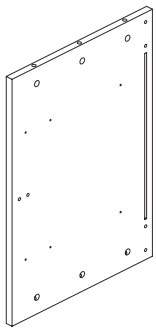


2 x2

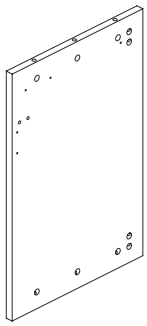


3 x1

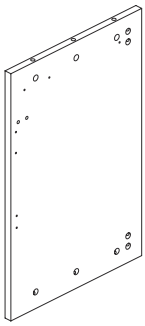


4 x1

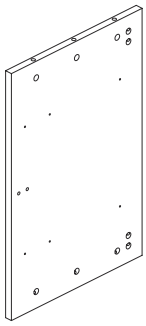


5 x1

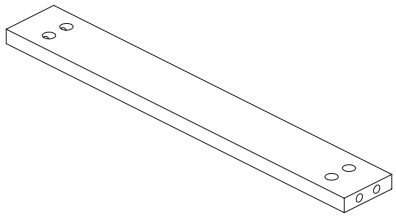


6 x2

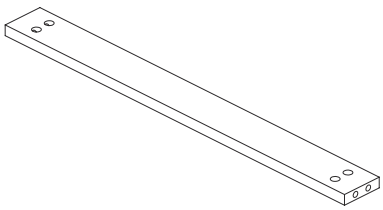


7 x1

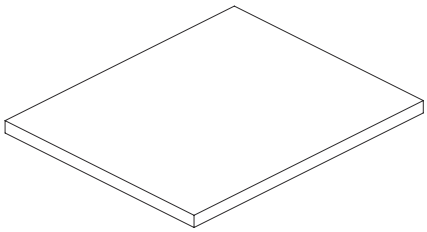


8 x1

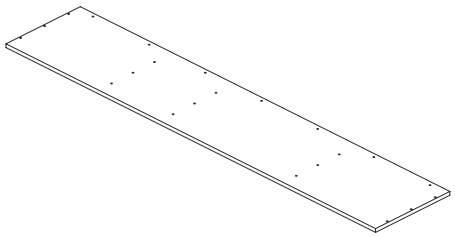


9 x1

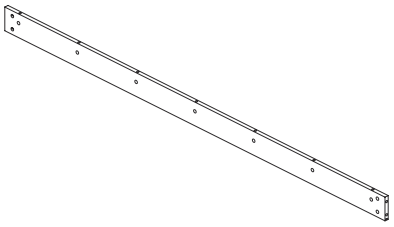

10 x1

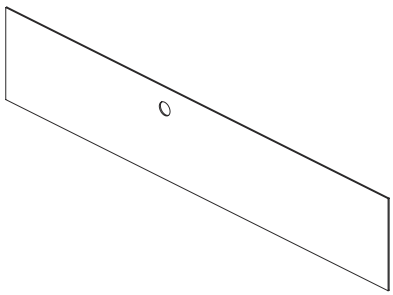


11 x1

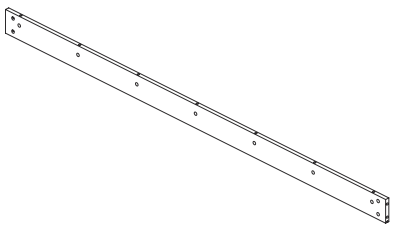


12 x1


PARTS LIST

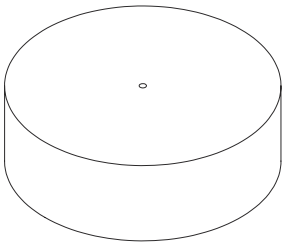


13 x2

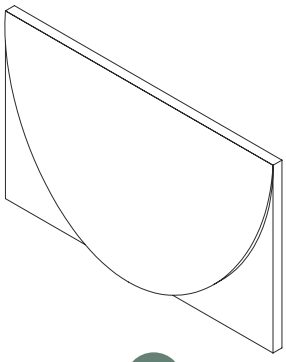


14 x1

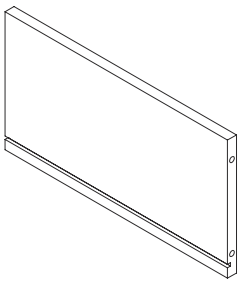


15 x2

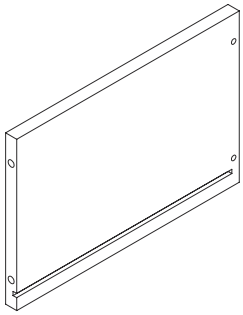


16 x2

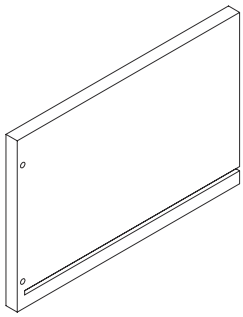


17 x2

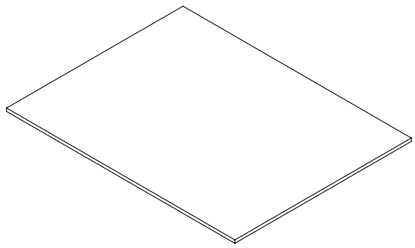


18 x2

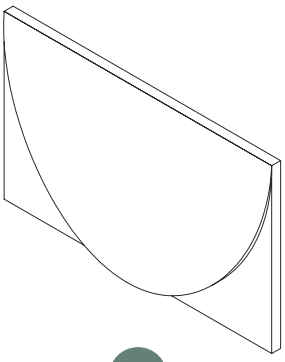


19 x1

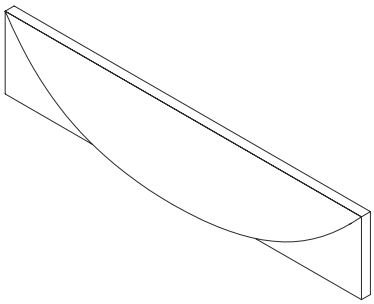


20 x1

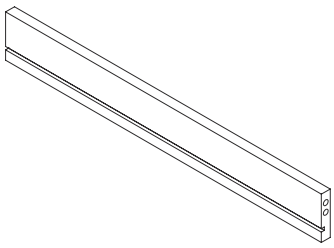


21 x1

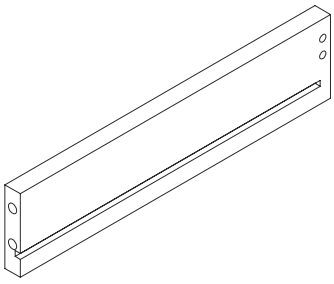

22 x1

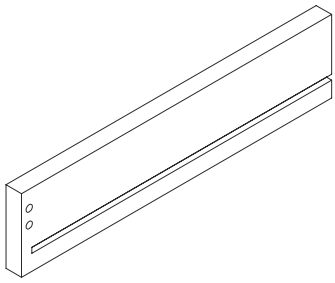


23 x1

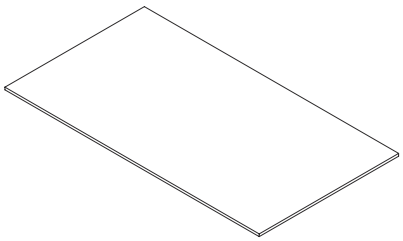


24 x1


PARTS LIST

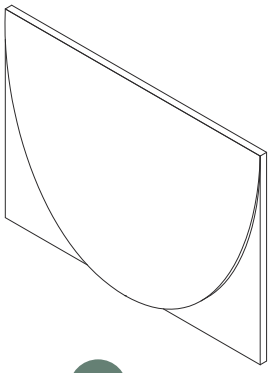

25 x1

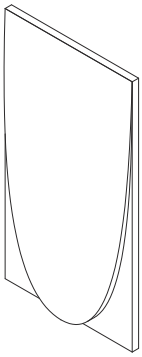


26 x1

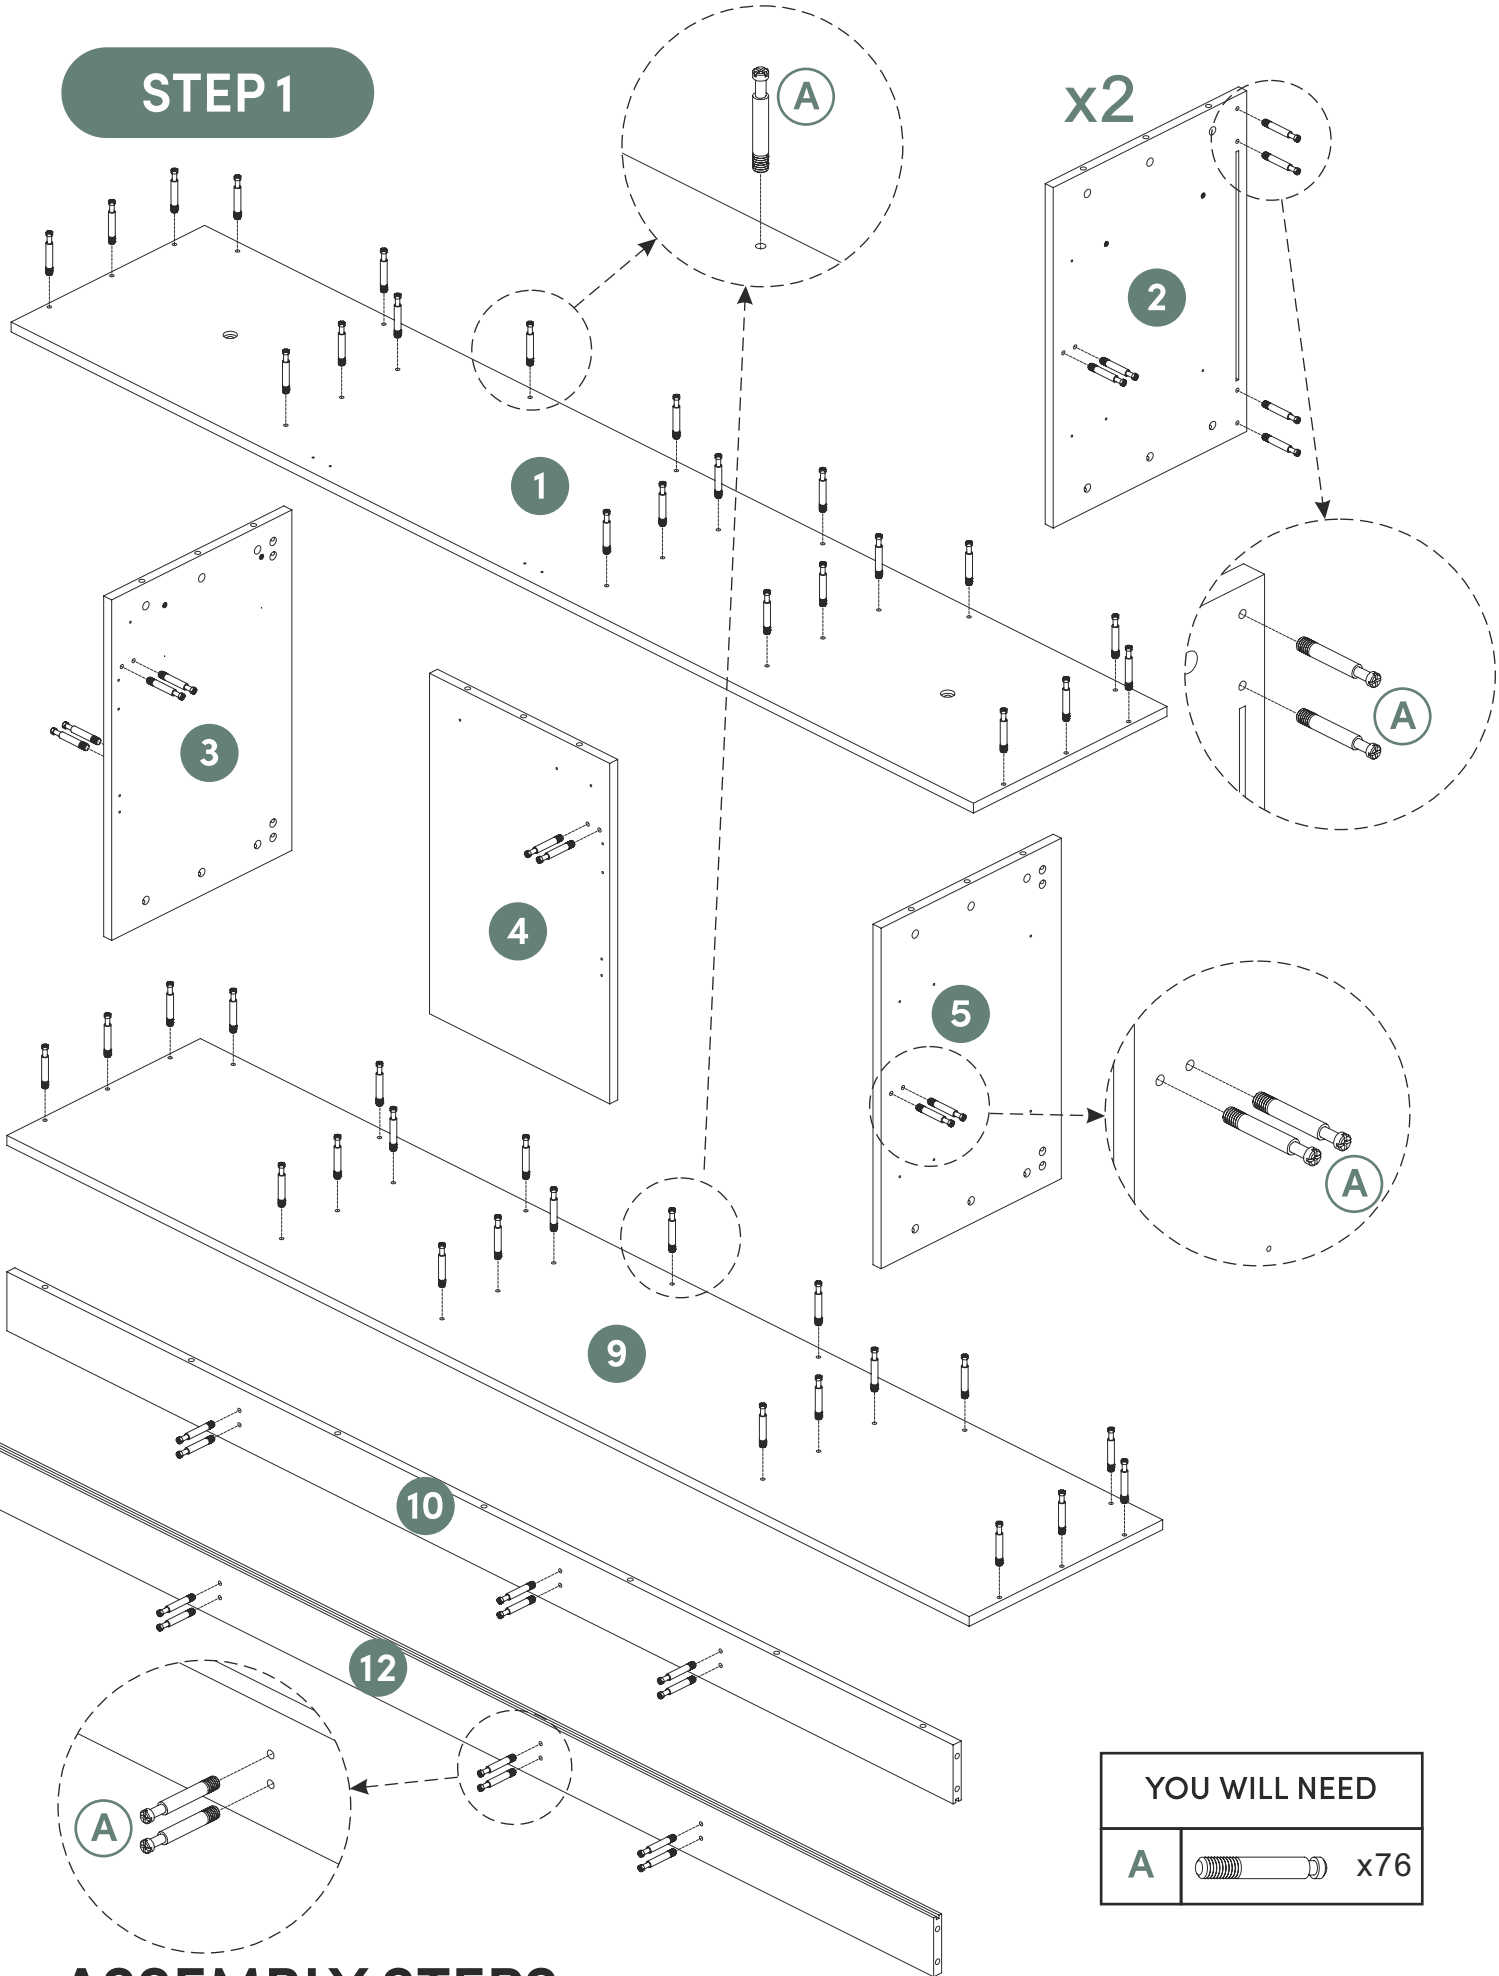


YOU WILL NEED		
A		x76

ASSEMBLY STEPS

STEP 2

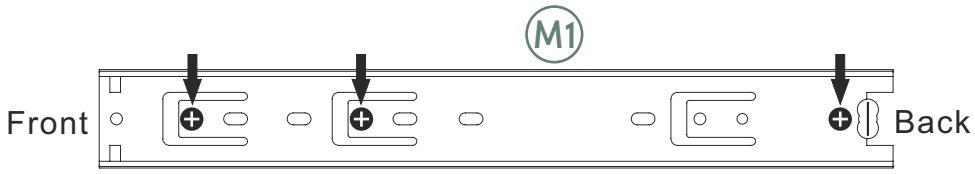


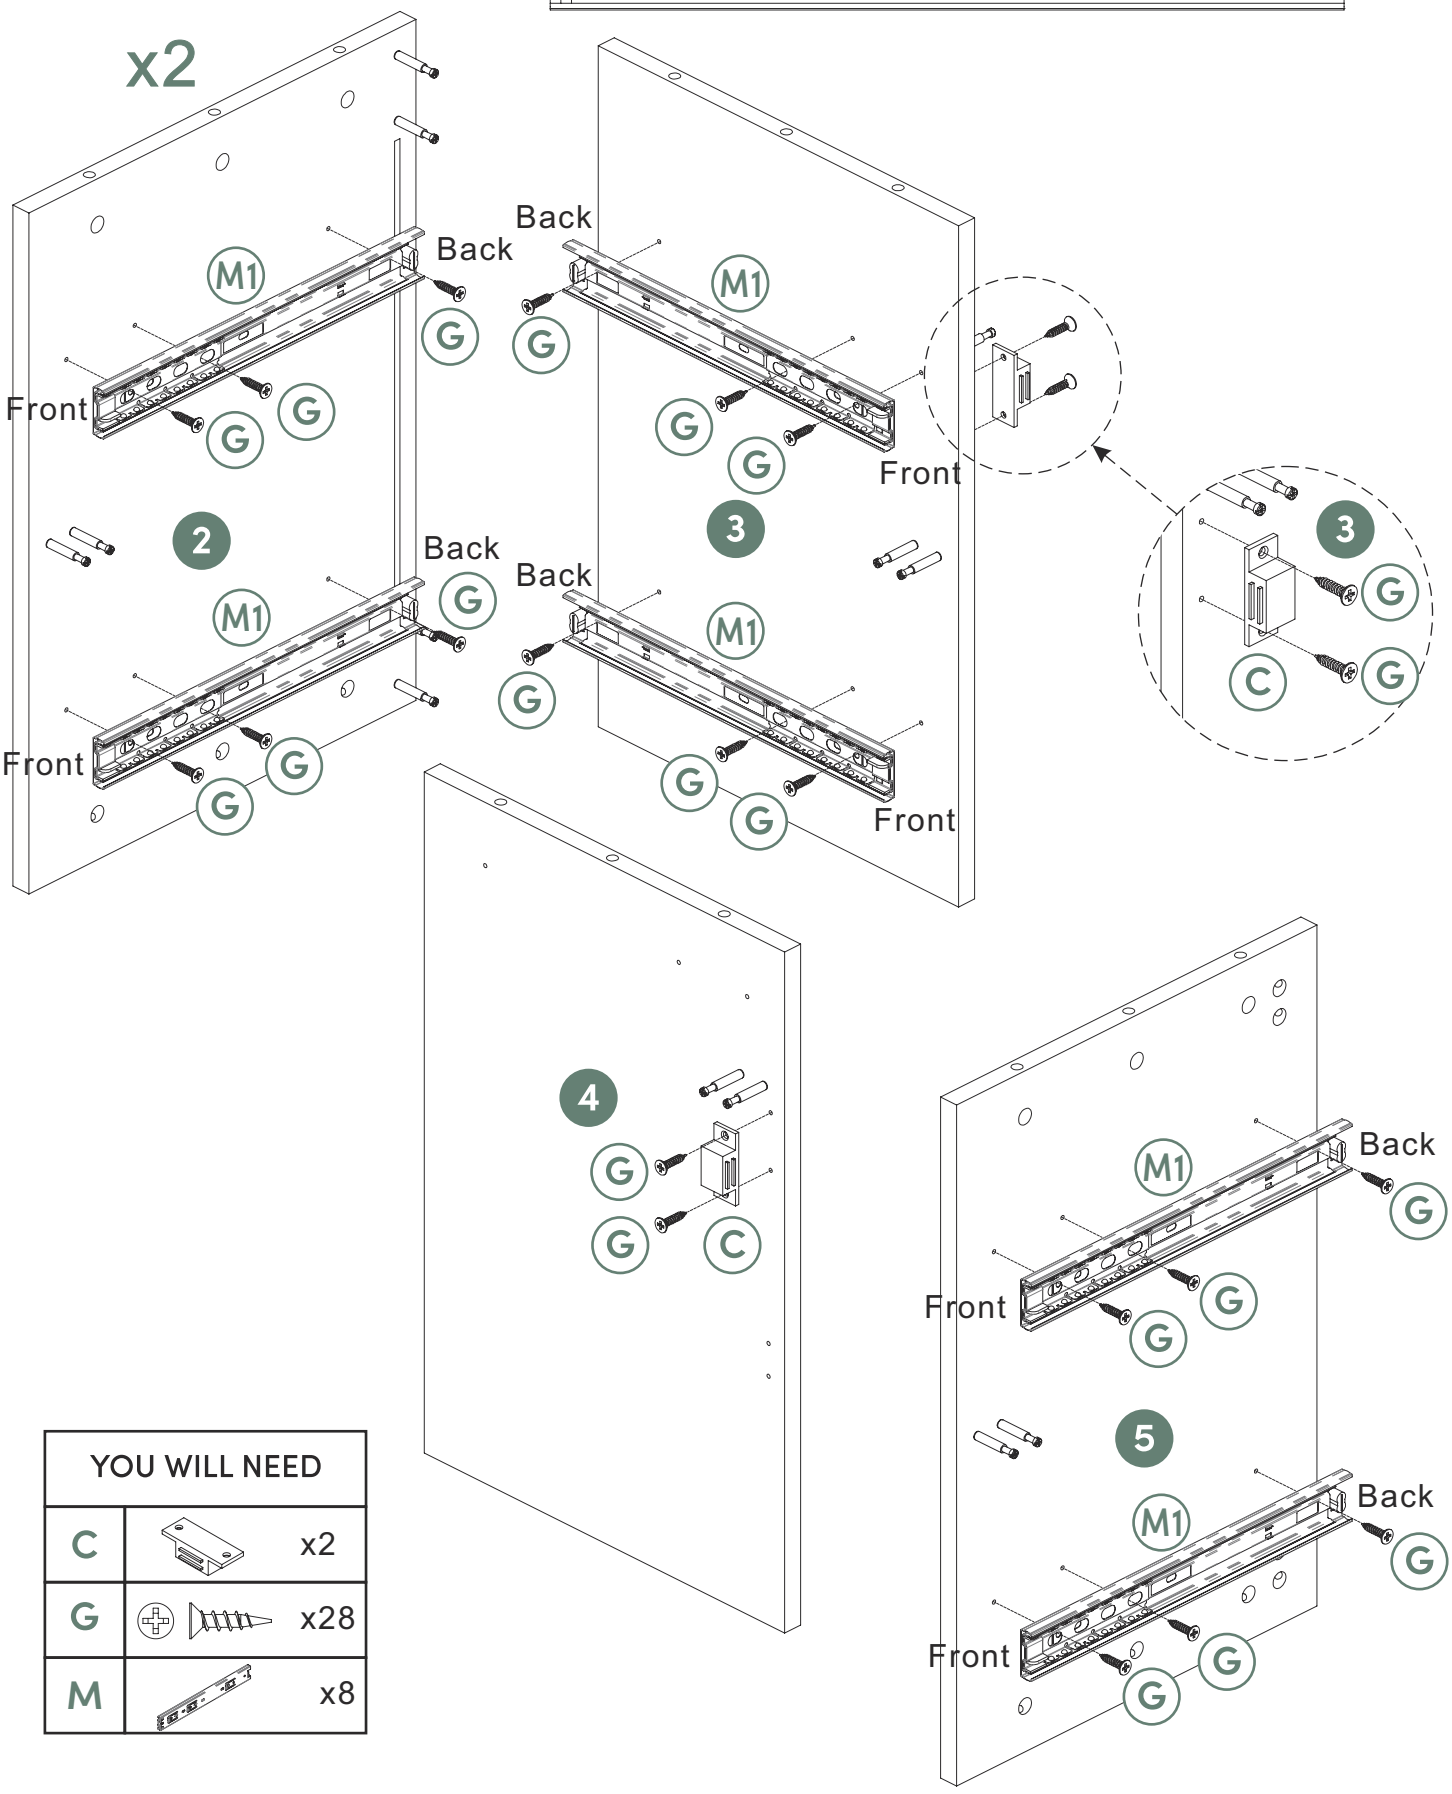


YOU WILL NEED		
C		x2
G		x28
M		x8

ASSEMBLY STEPS

STEP 3

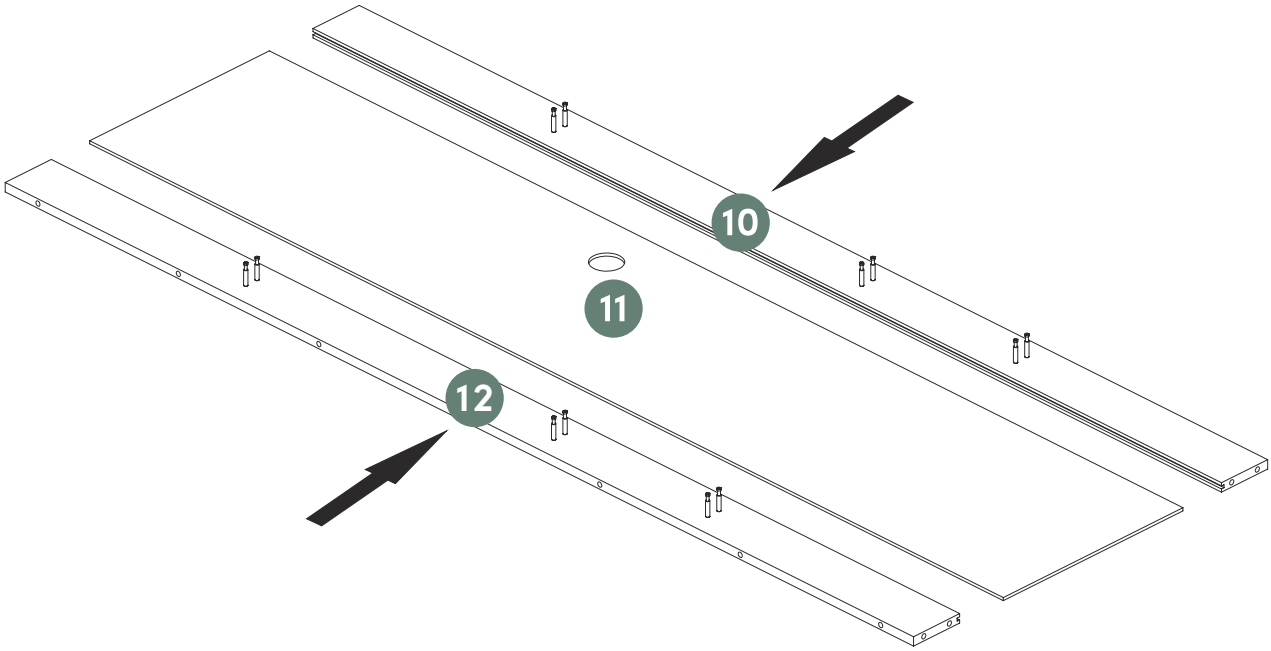


STEP 4

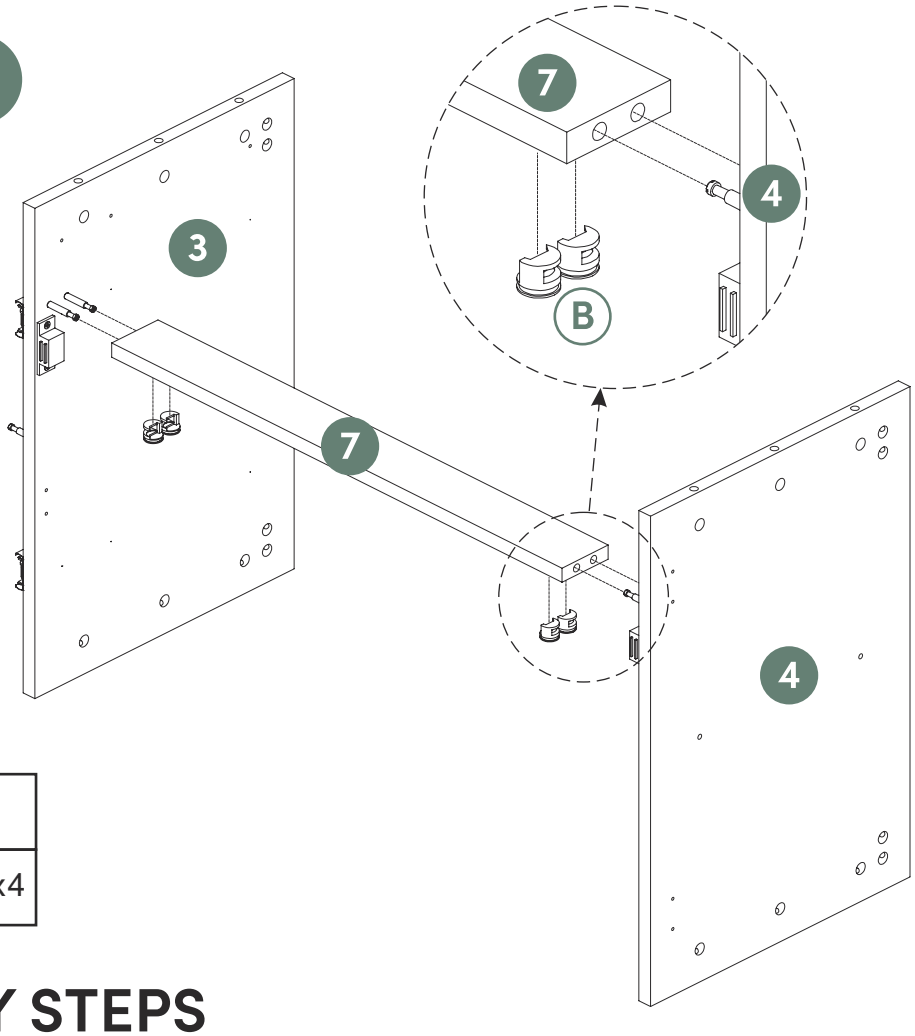

YOU WILL NEED		
B		x4


ASSEMBLY STEPS

STEP 5

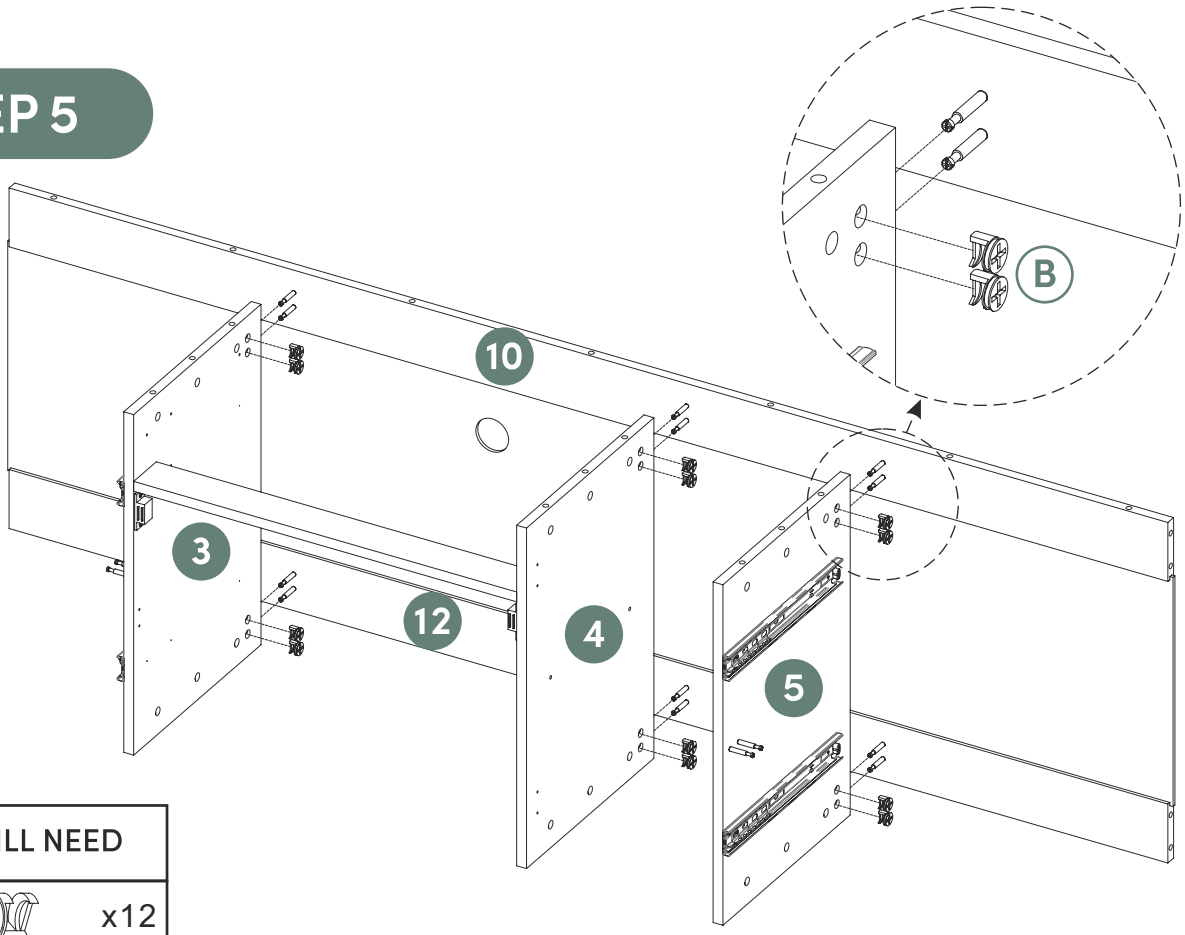

YOU WILL NEED		
B		x12


STEP 6

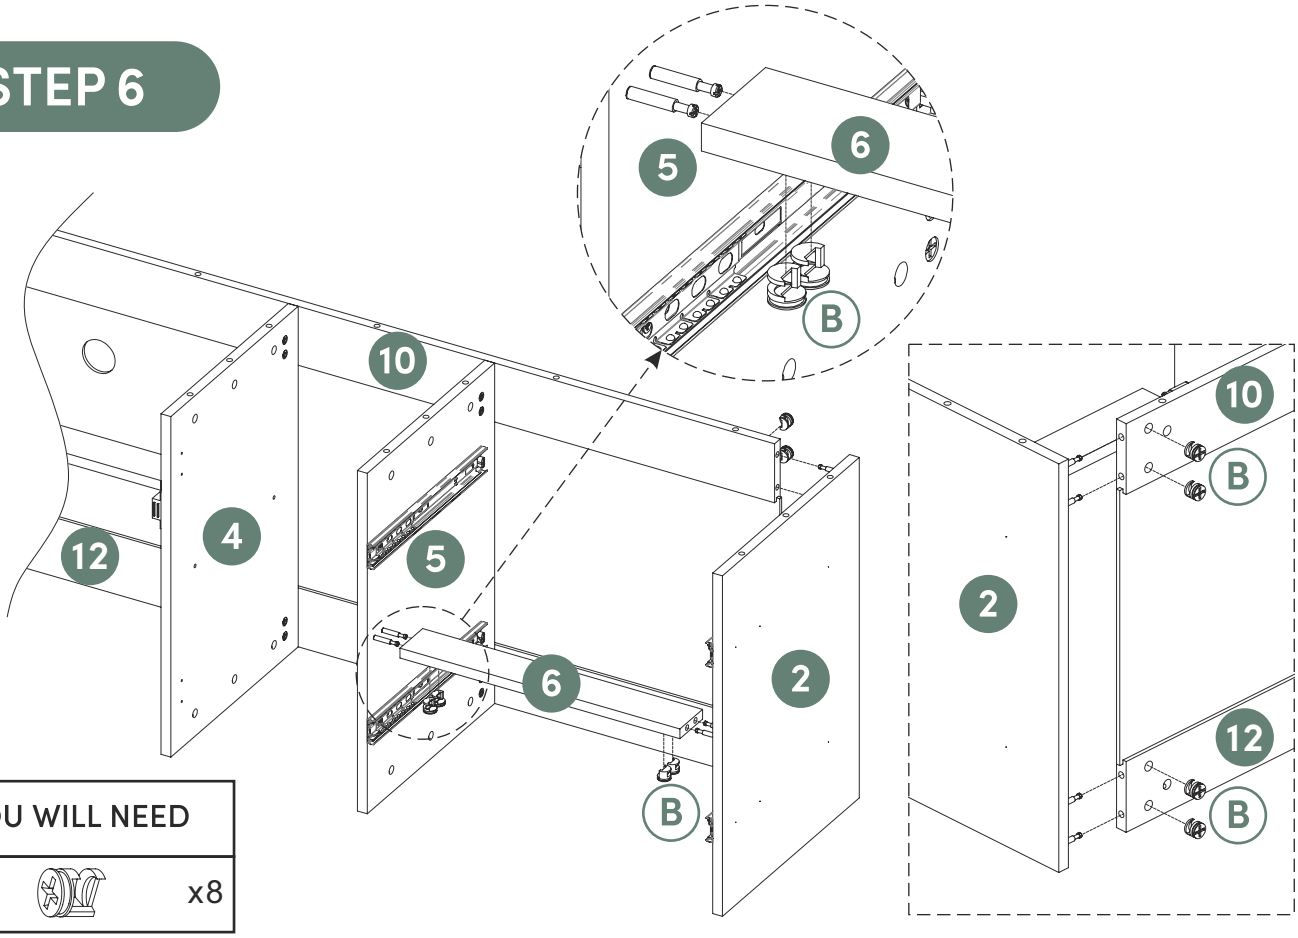


YOU WILL NEED		
B		x8

ASSEMBLY STEPS


STEP 7

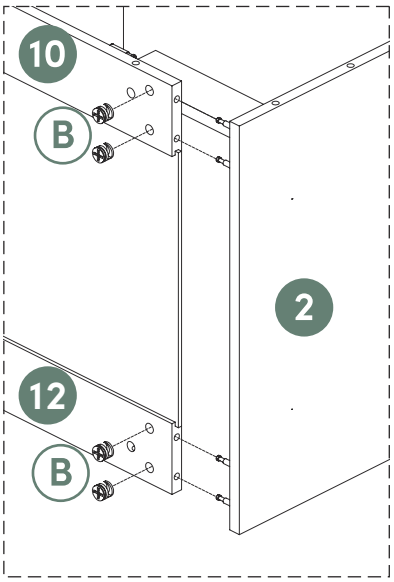

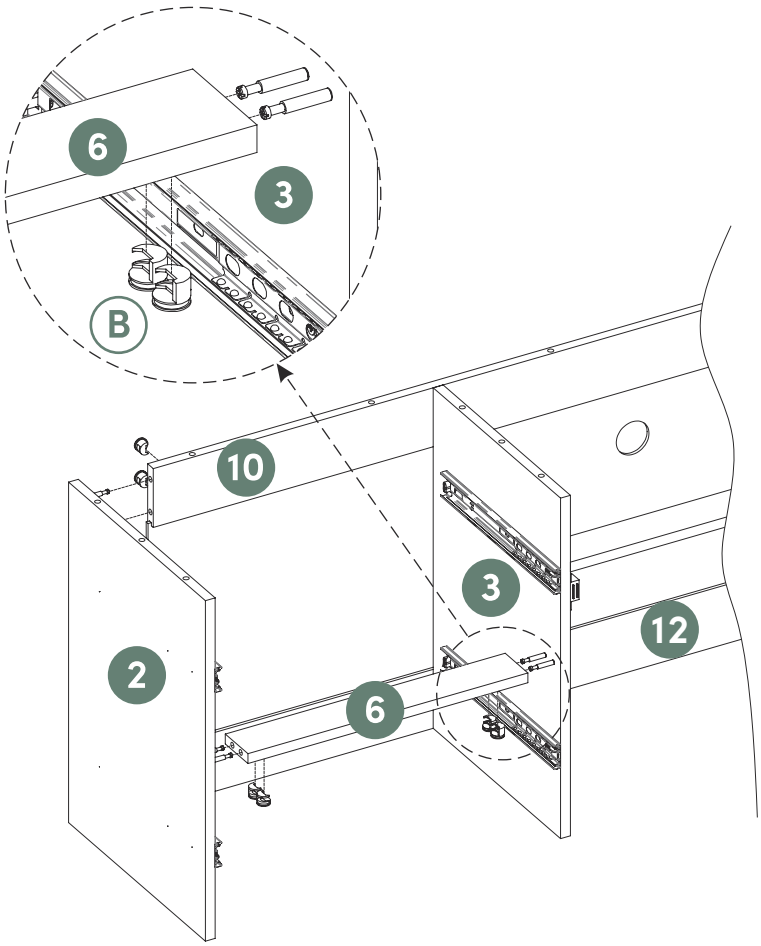

YOU WILL NEED		
B		x8


STEP 8

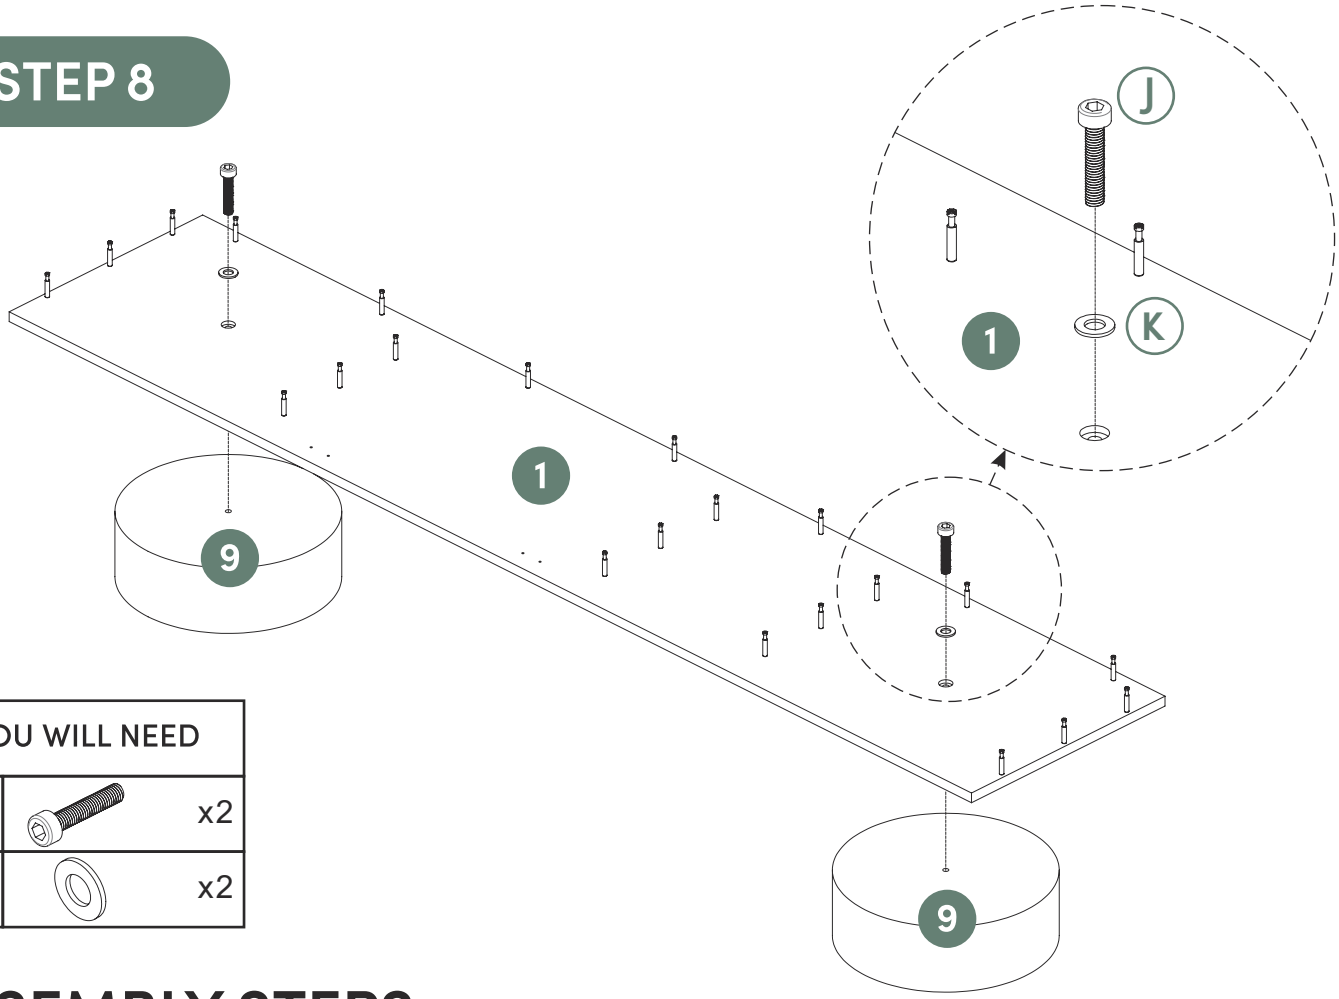

YOU WILL NEED		
J		x2
K		x2

ASSEMBLY STEPS


STEP 9

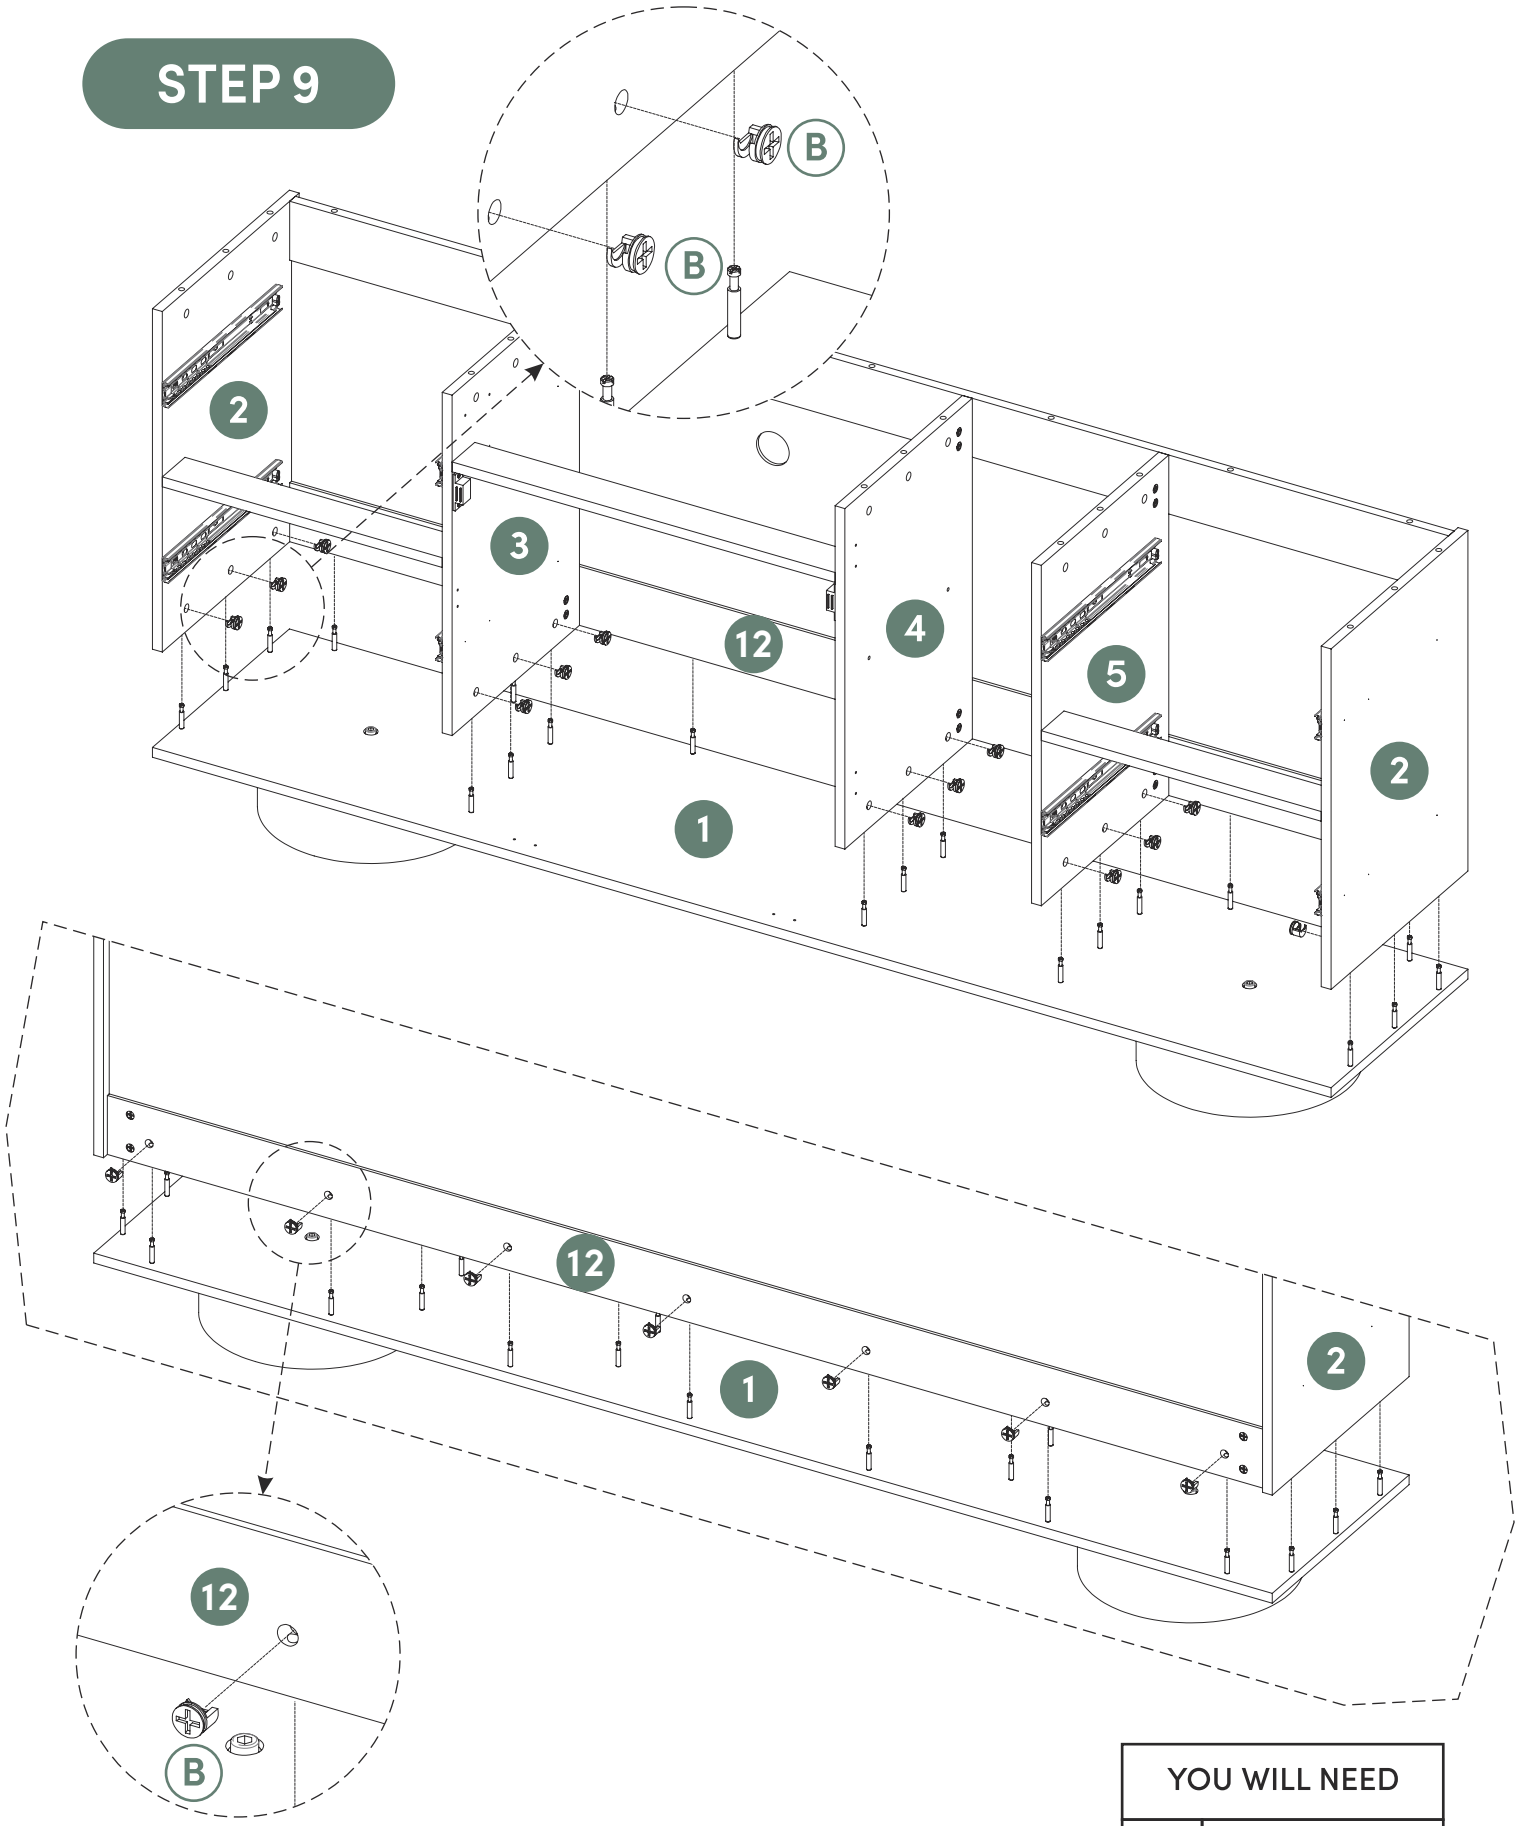

YOU WILL NEED		
B		x22

ASSEMBLY STEPS


STEP 10

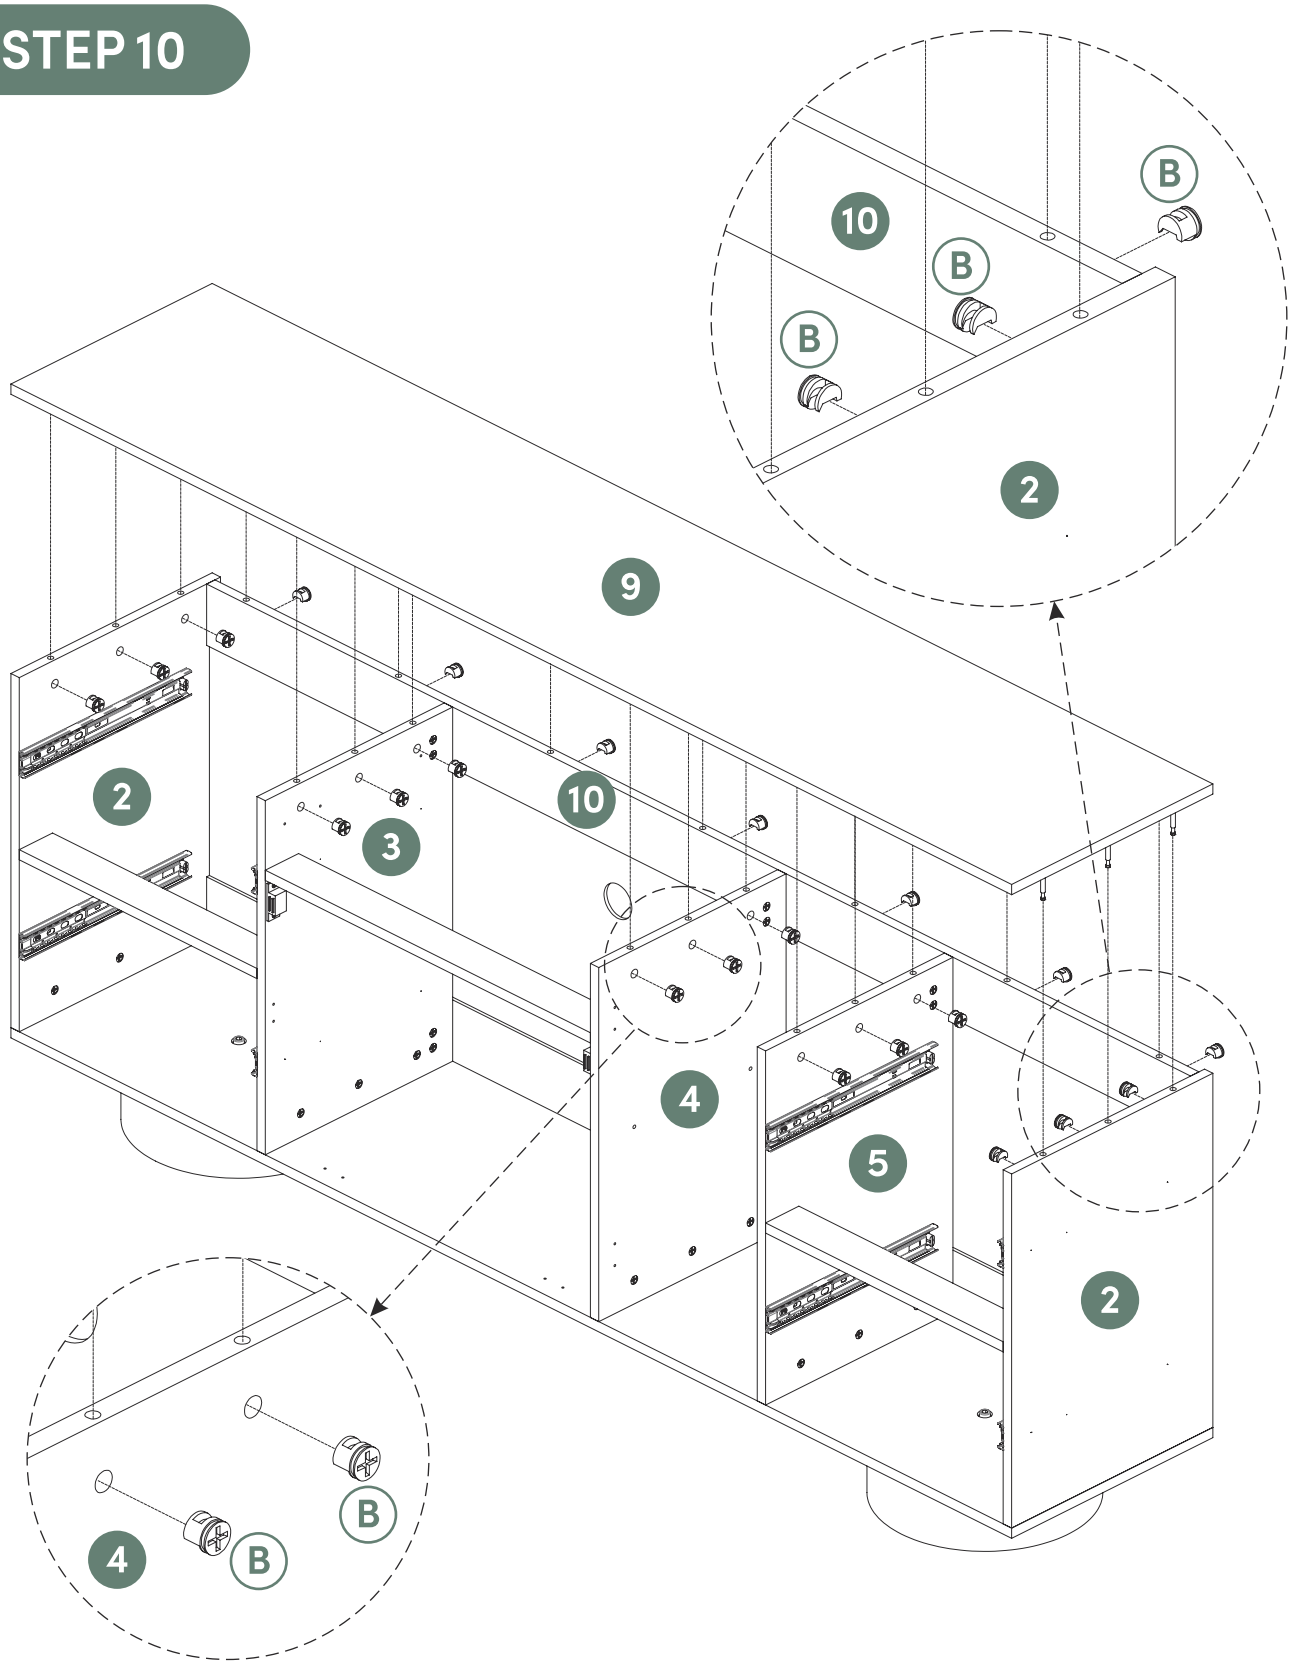



YOU WILL NEED		
B		x22



ASSEMBLY STEPS

STEP 11

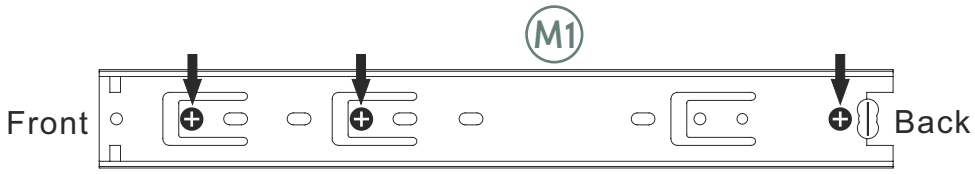

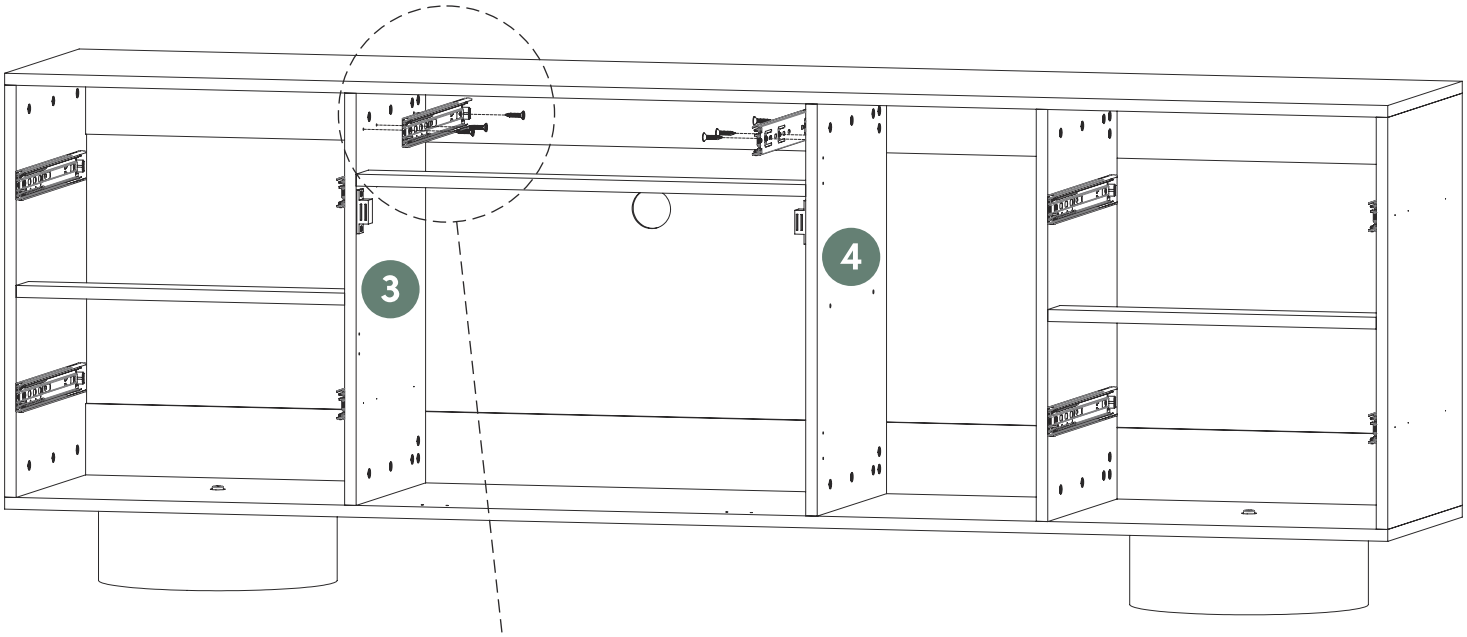


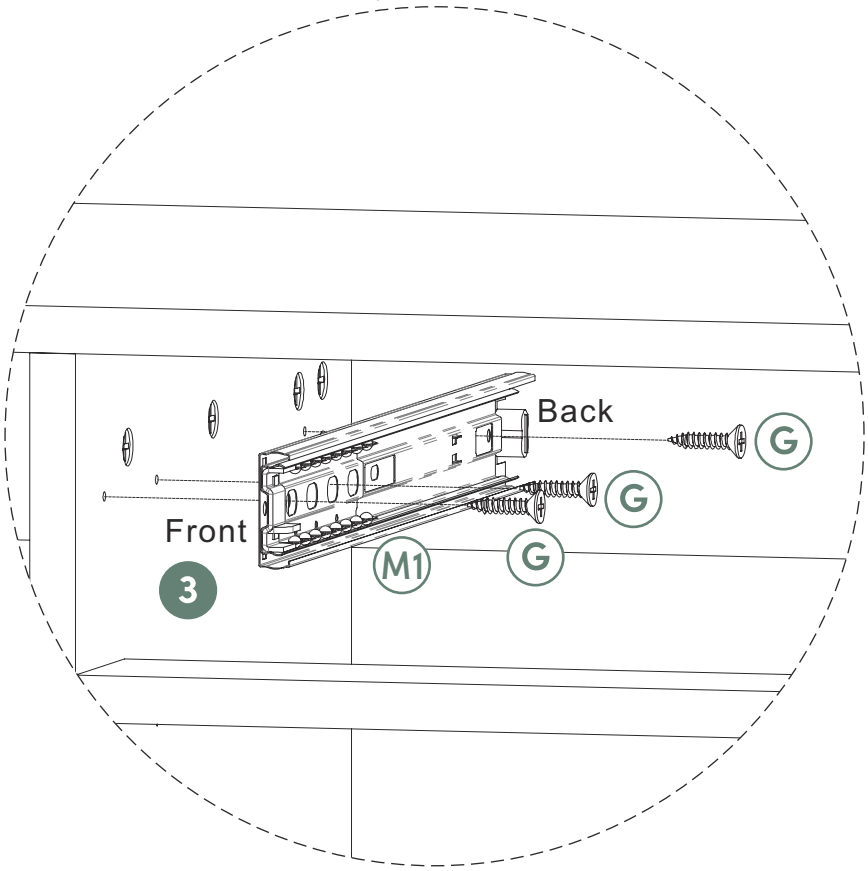

YOU WILL NEED		
G		x6
M		x2


ASSEMBLY STEPS

STEP 12

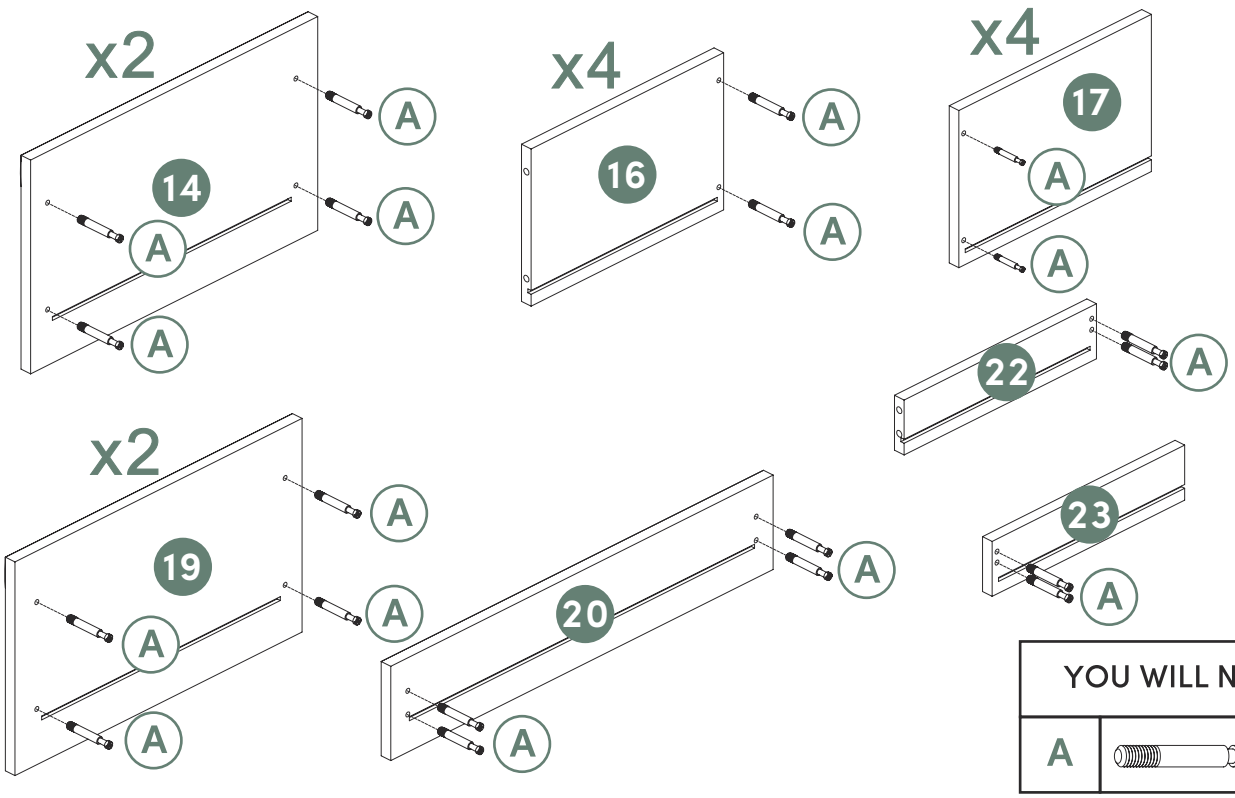

YOU WILL NEED		
A		x40


STEP 13

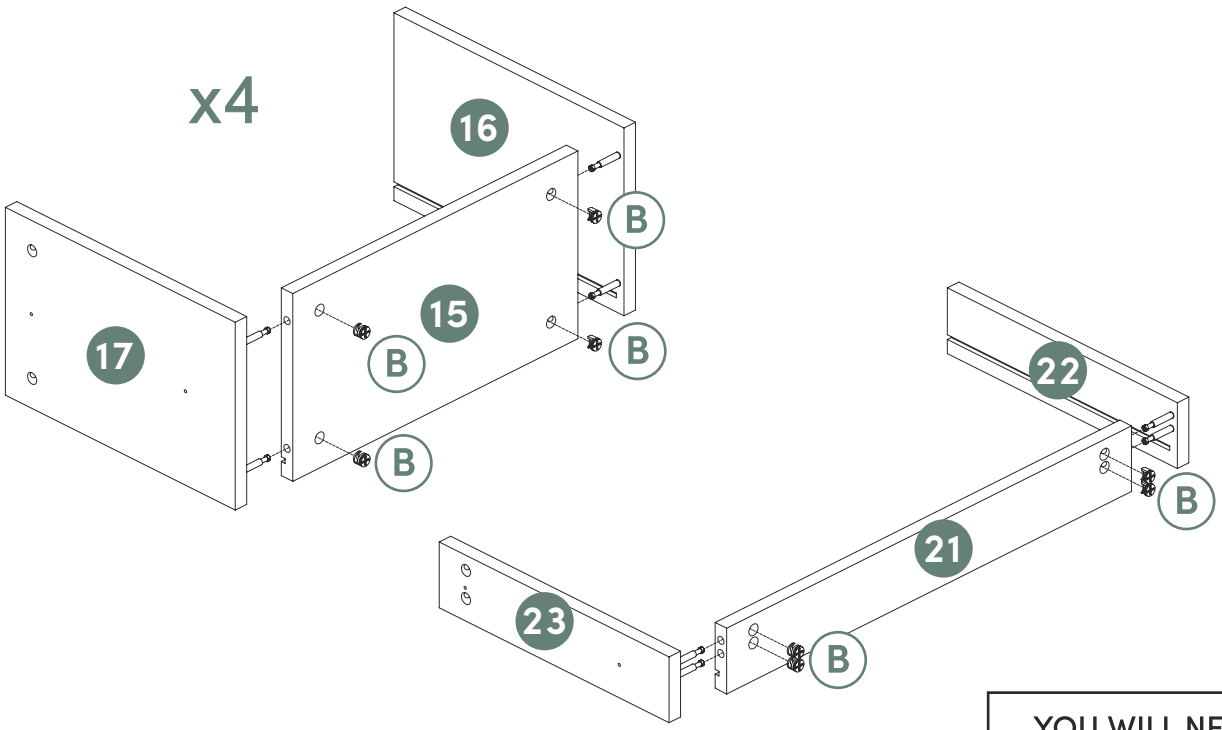


YOU WILL NEED		
B		x20

ASSEMBLY STEPS

STEP 14

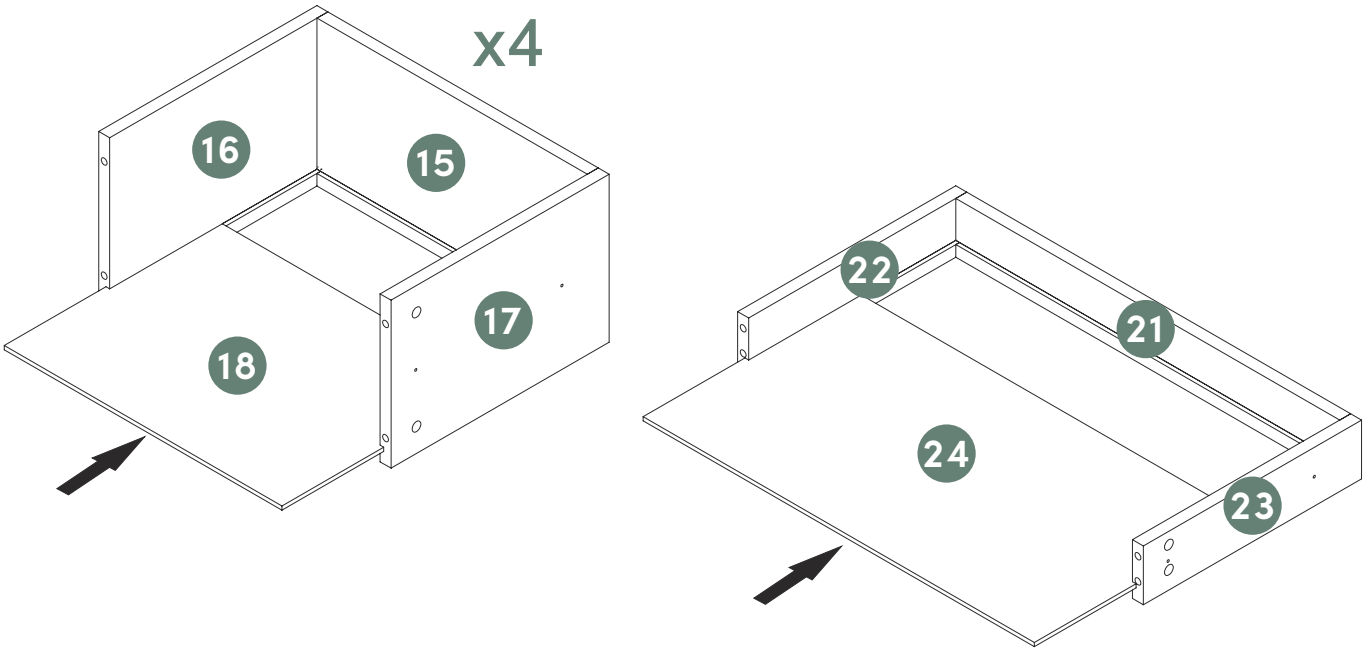


STEP 15

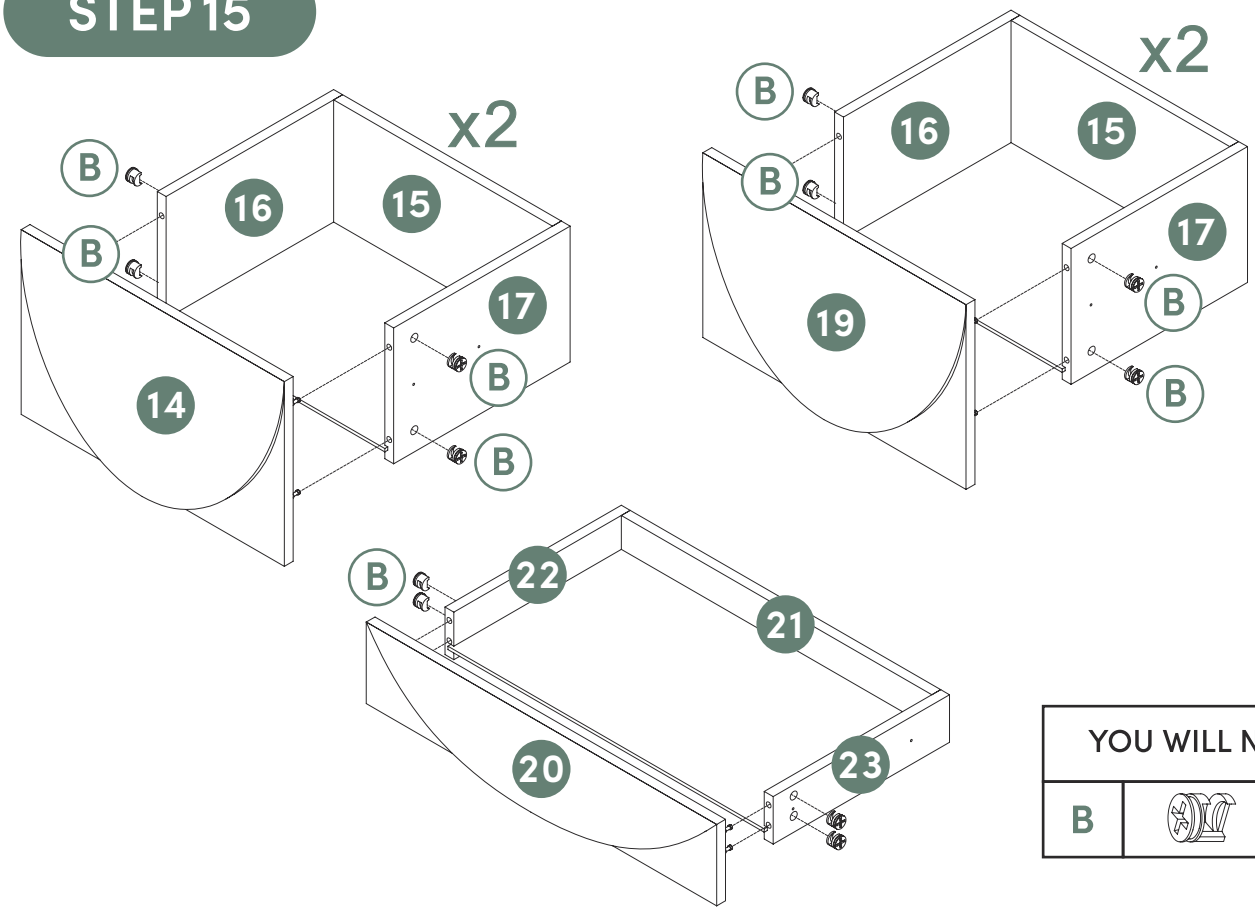


YOU WILL NEED		
B		x20

ASSEMBLY STEPS

STEP 16

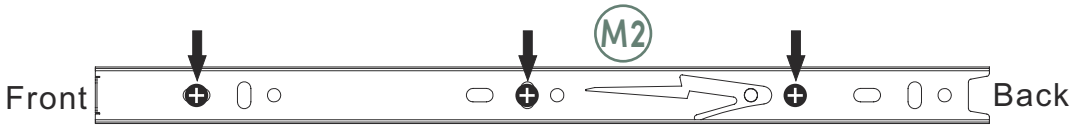


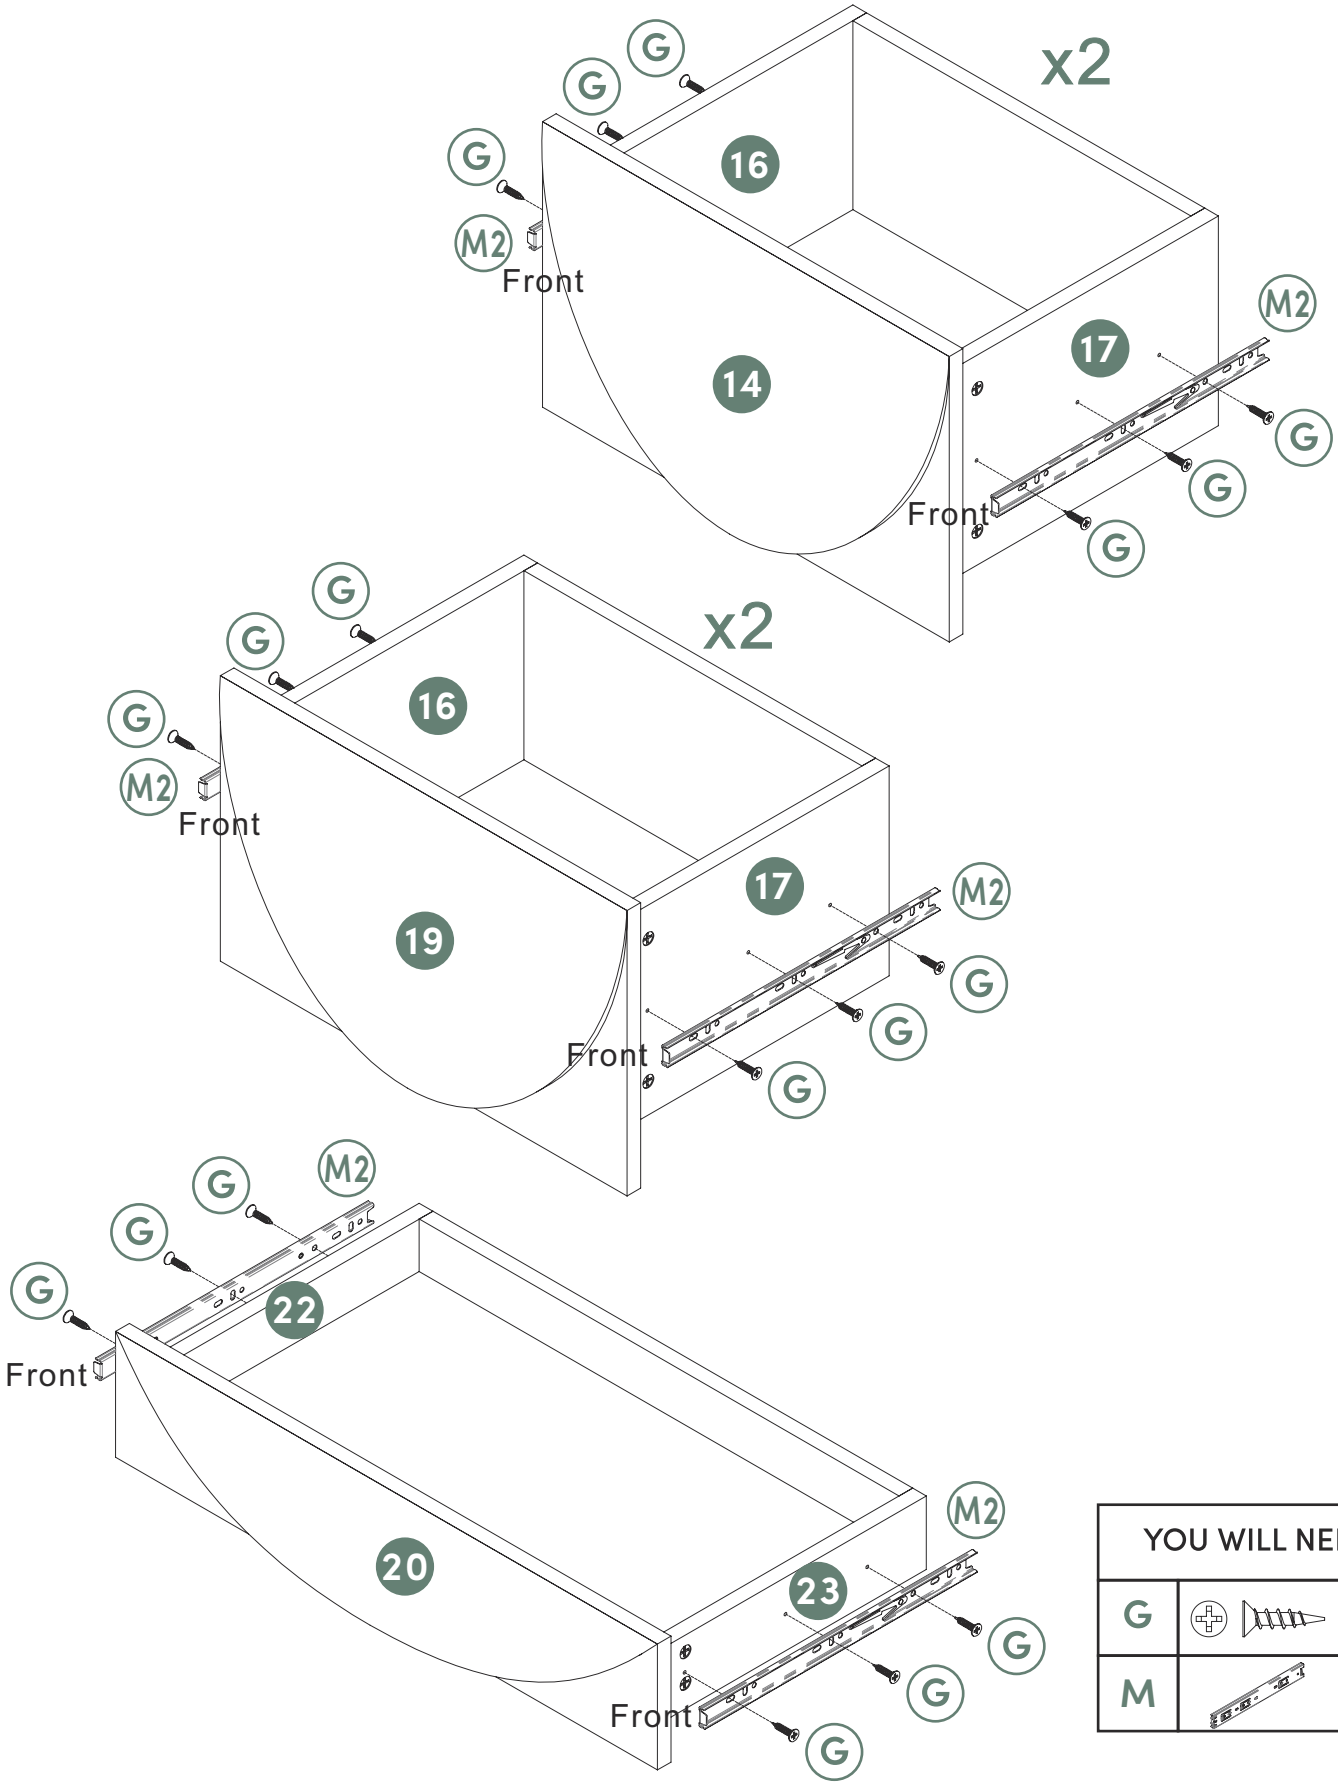


YOU WILL NEED	
G	x30
M	x10

ASSEMBLY STEPS

STEP 17

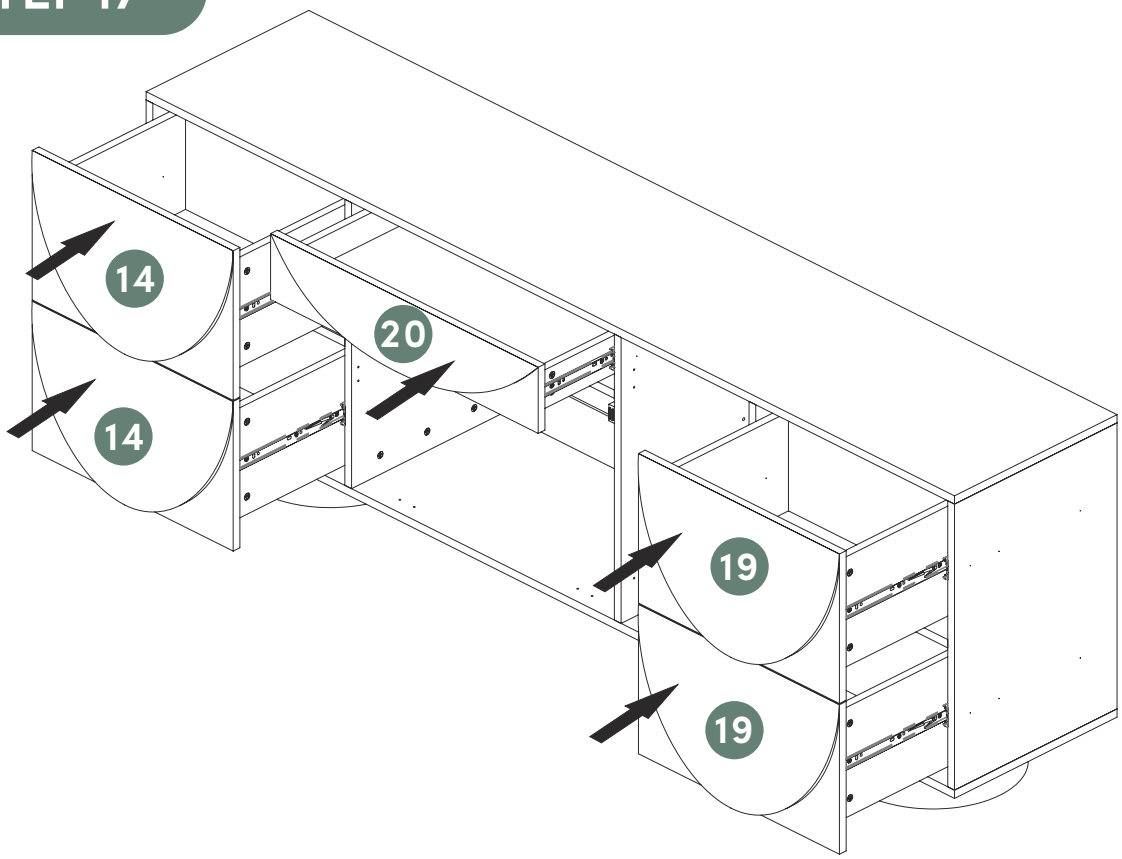


STEP 18

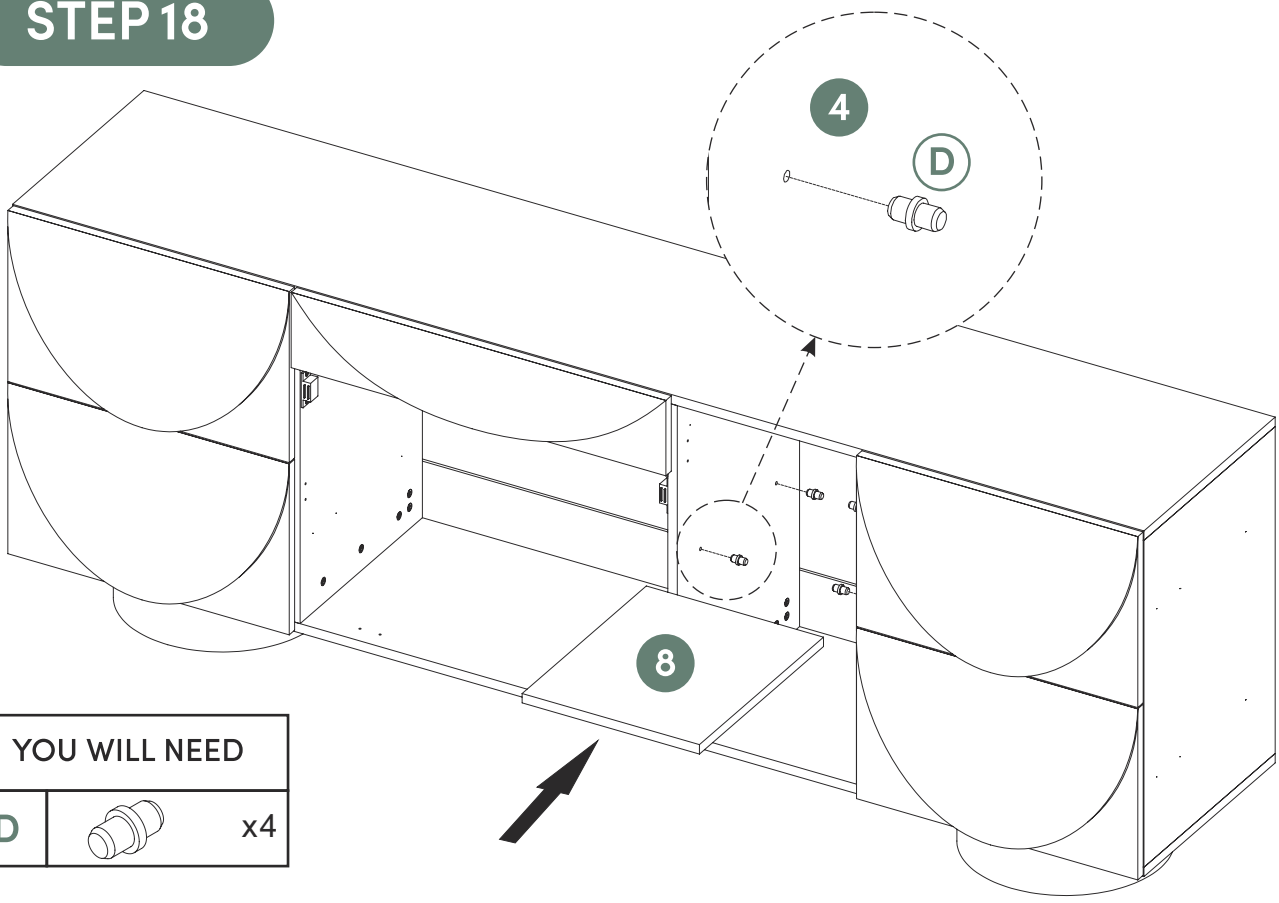


YOU WILL NEED		
D		x4

ASSEMBLY STEPS


STEP 19

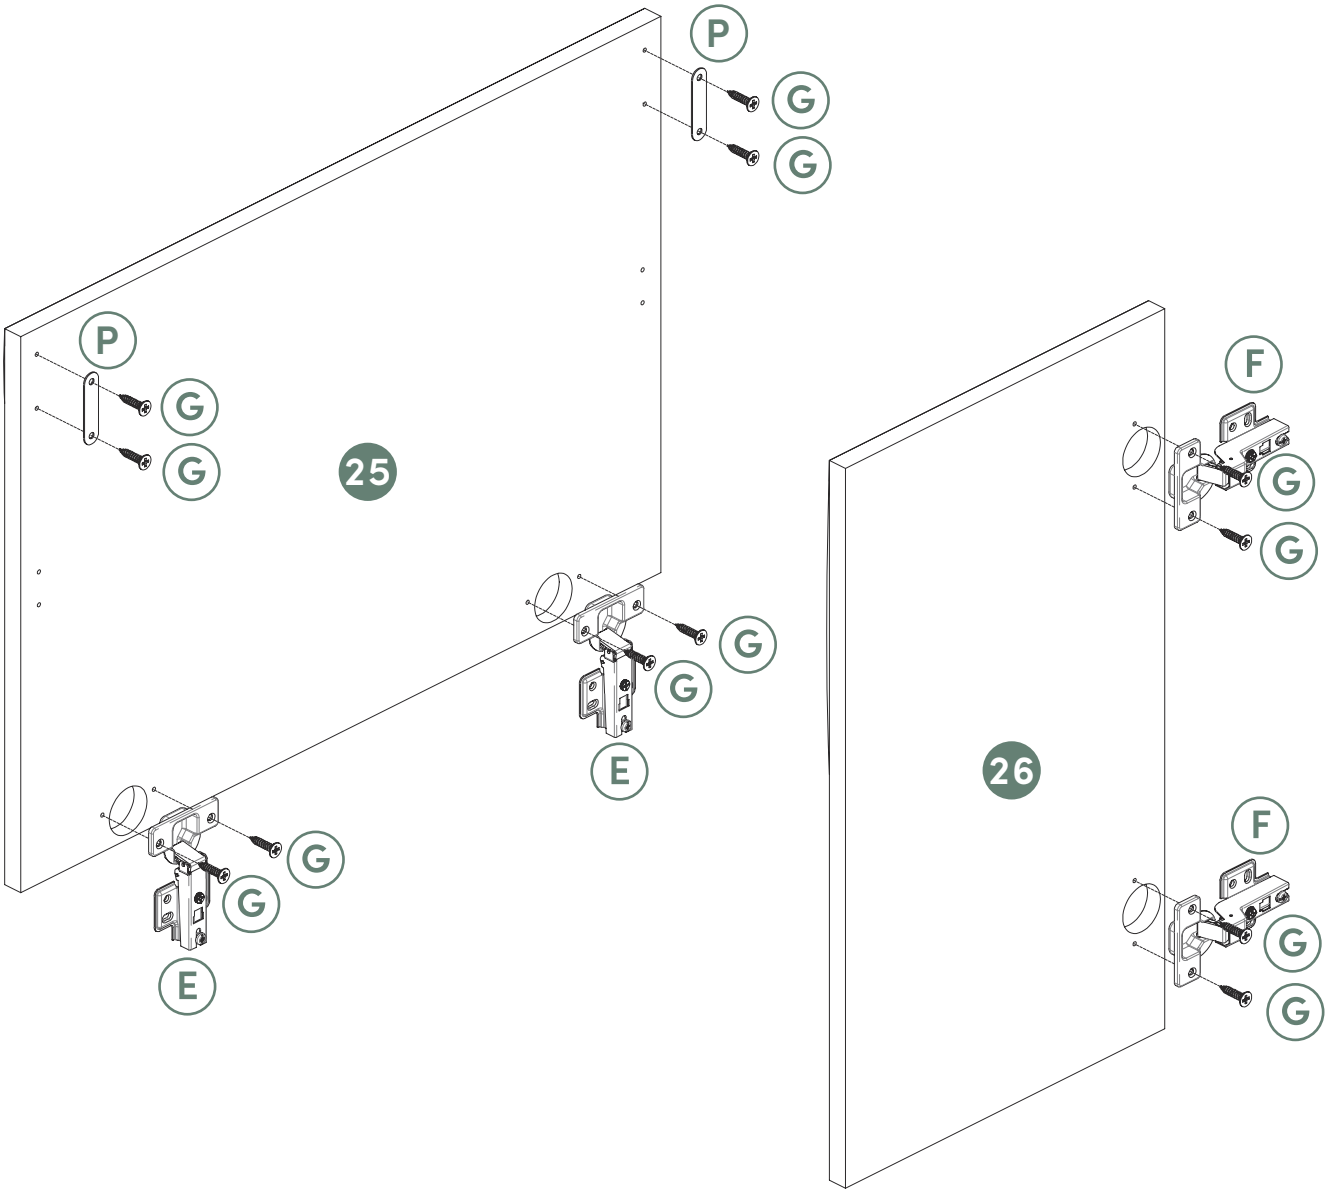

YOU WILL NEED		
E		x2
F		x2
G		x12
P		x2

ASSEMBLY STEPS


STEP 20

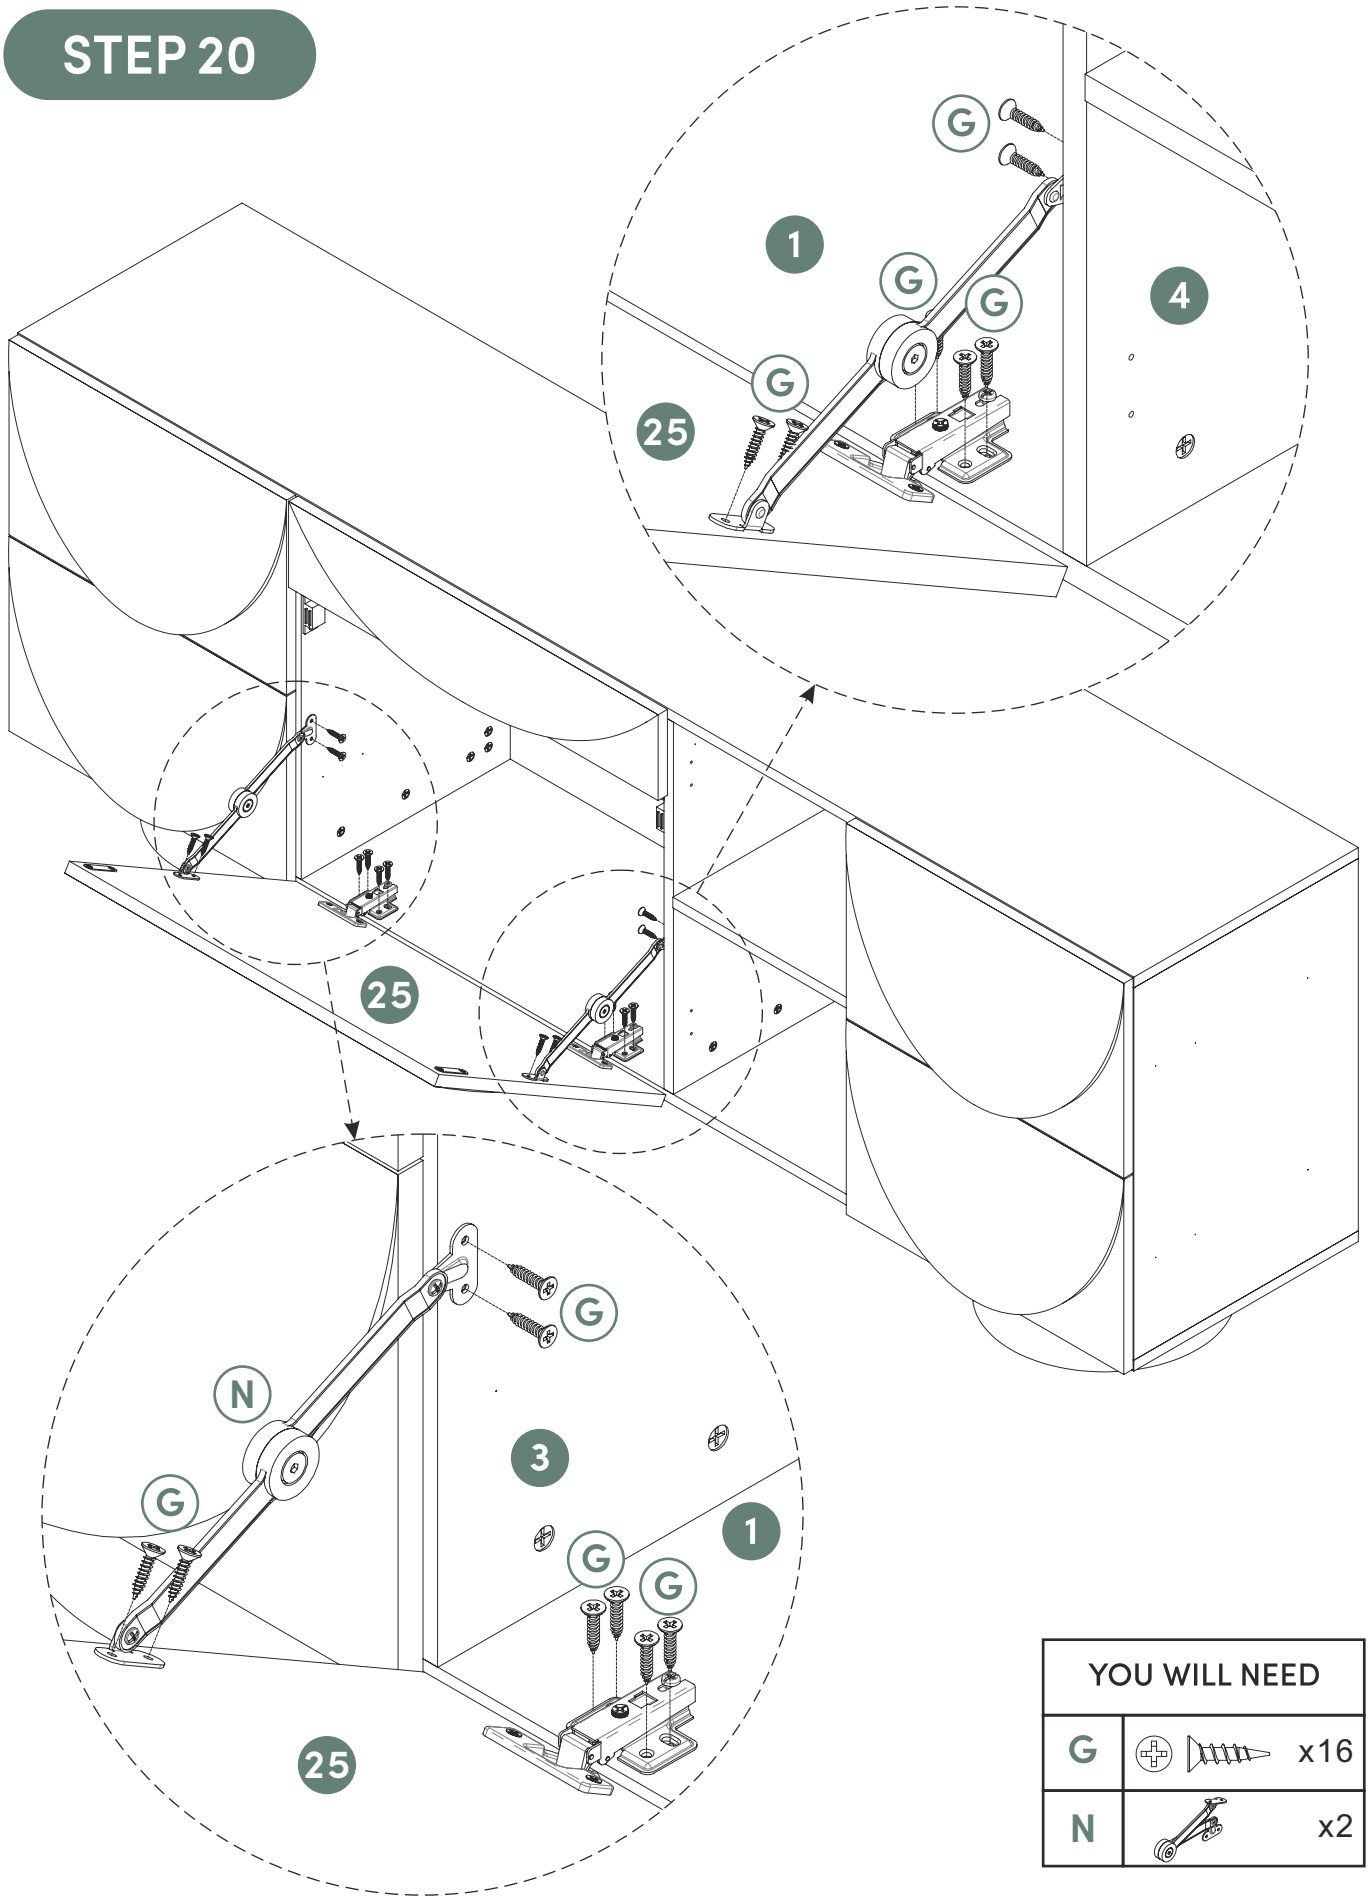

YOU WILL NEED	
G	x16
N	x2

ASSEMBLY STEPS

STEP 21

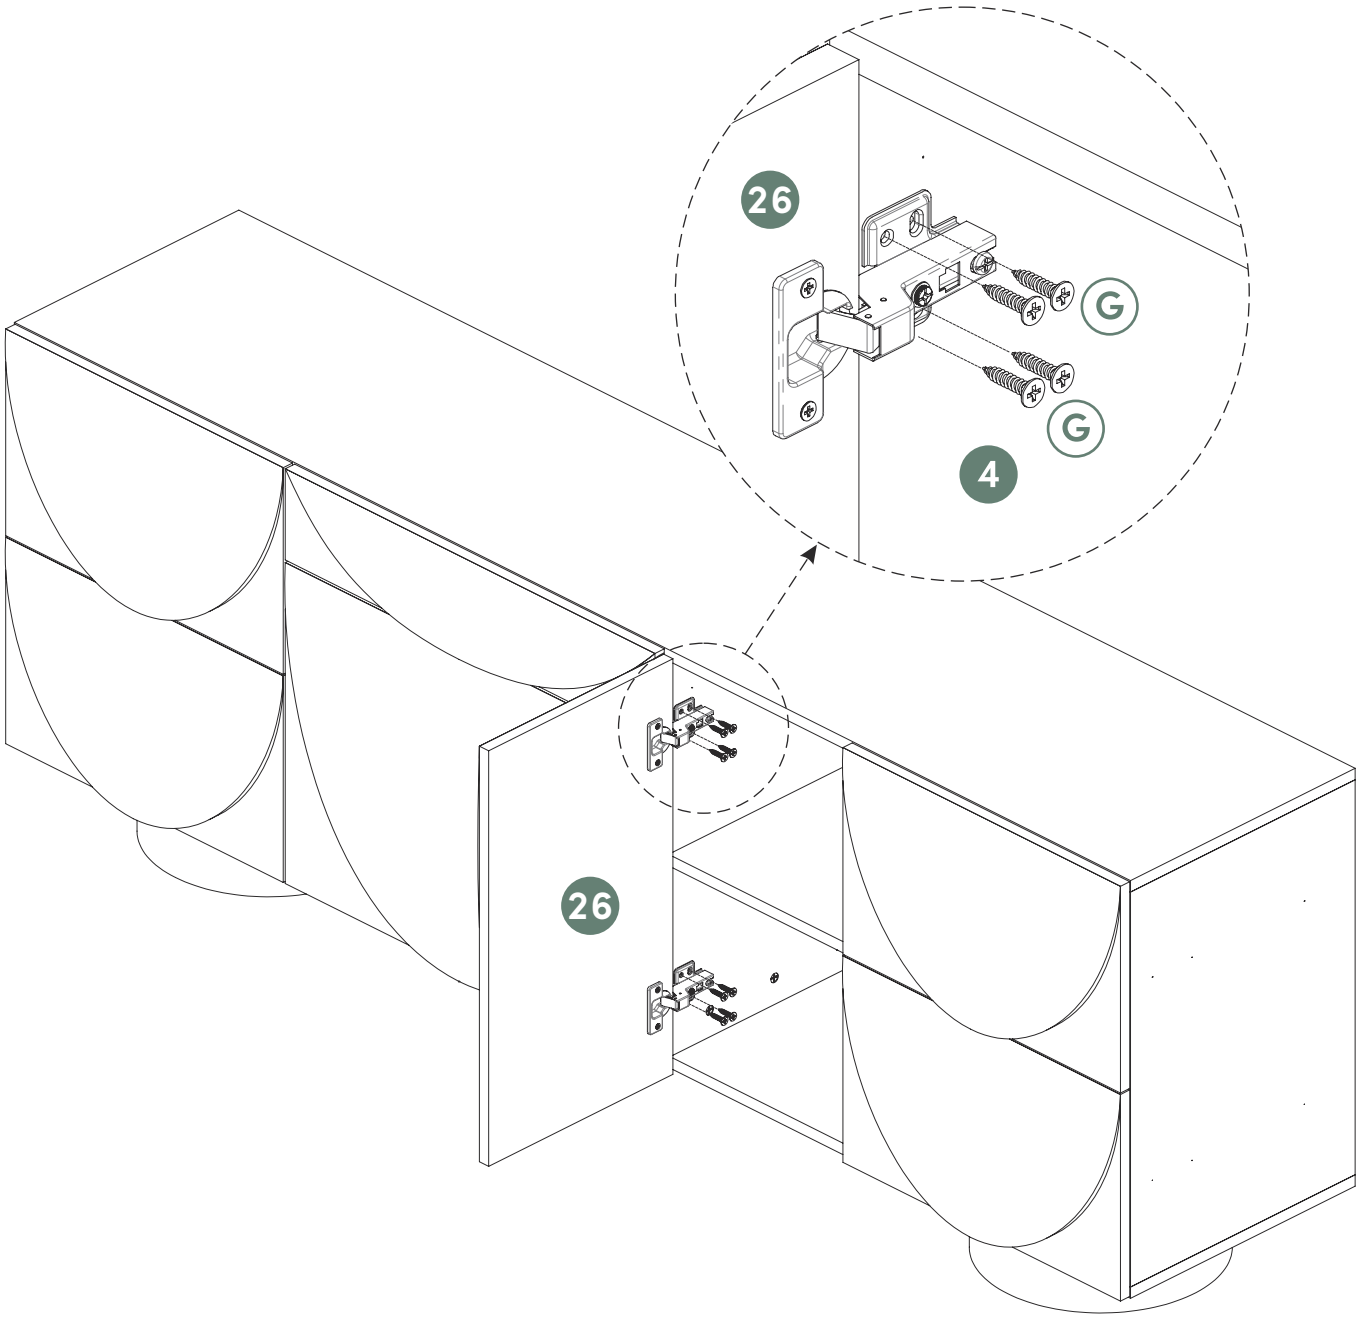


YOU WILL NEED	
G	x8


ASSEMBLY STEPS

Hinge Adjustment


Adjusts left-right (side-to-side)

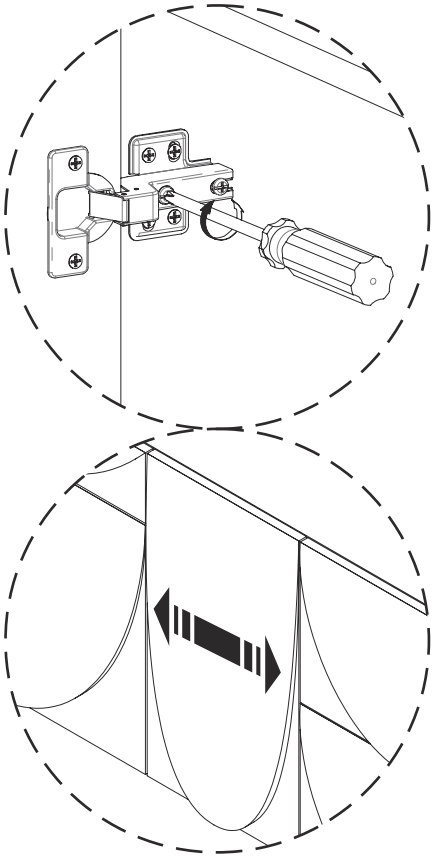

Adjusts in-out (depth)

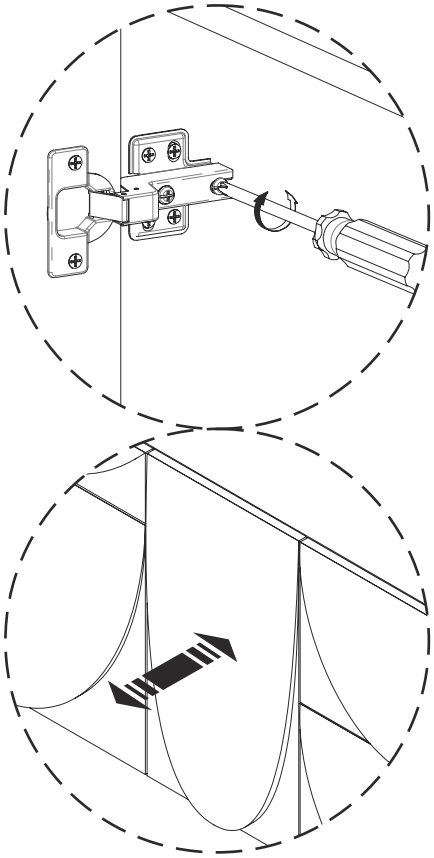



Adjusts up-down (height)

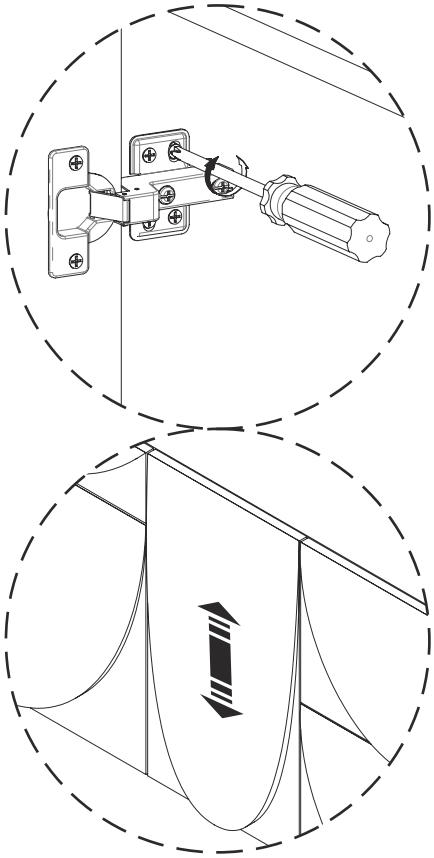

ASSEMBLY STEPS

STEP 22

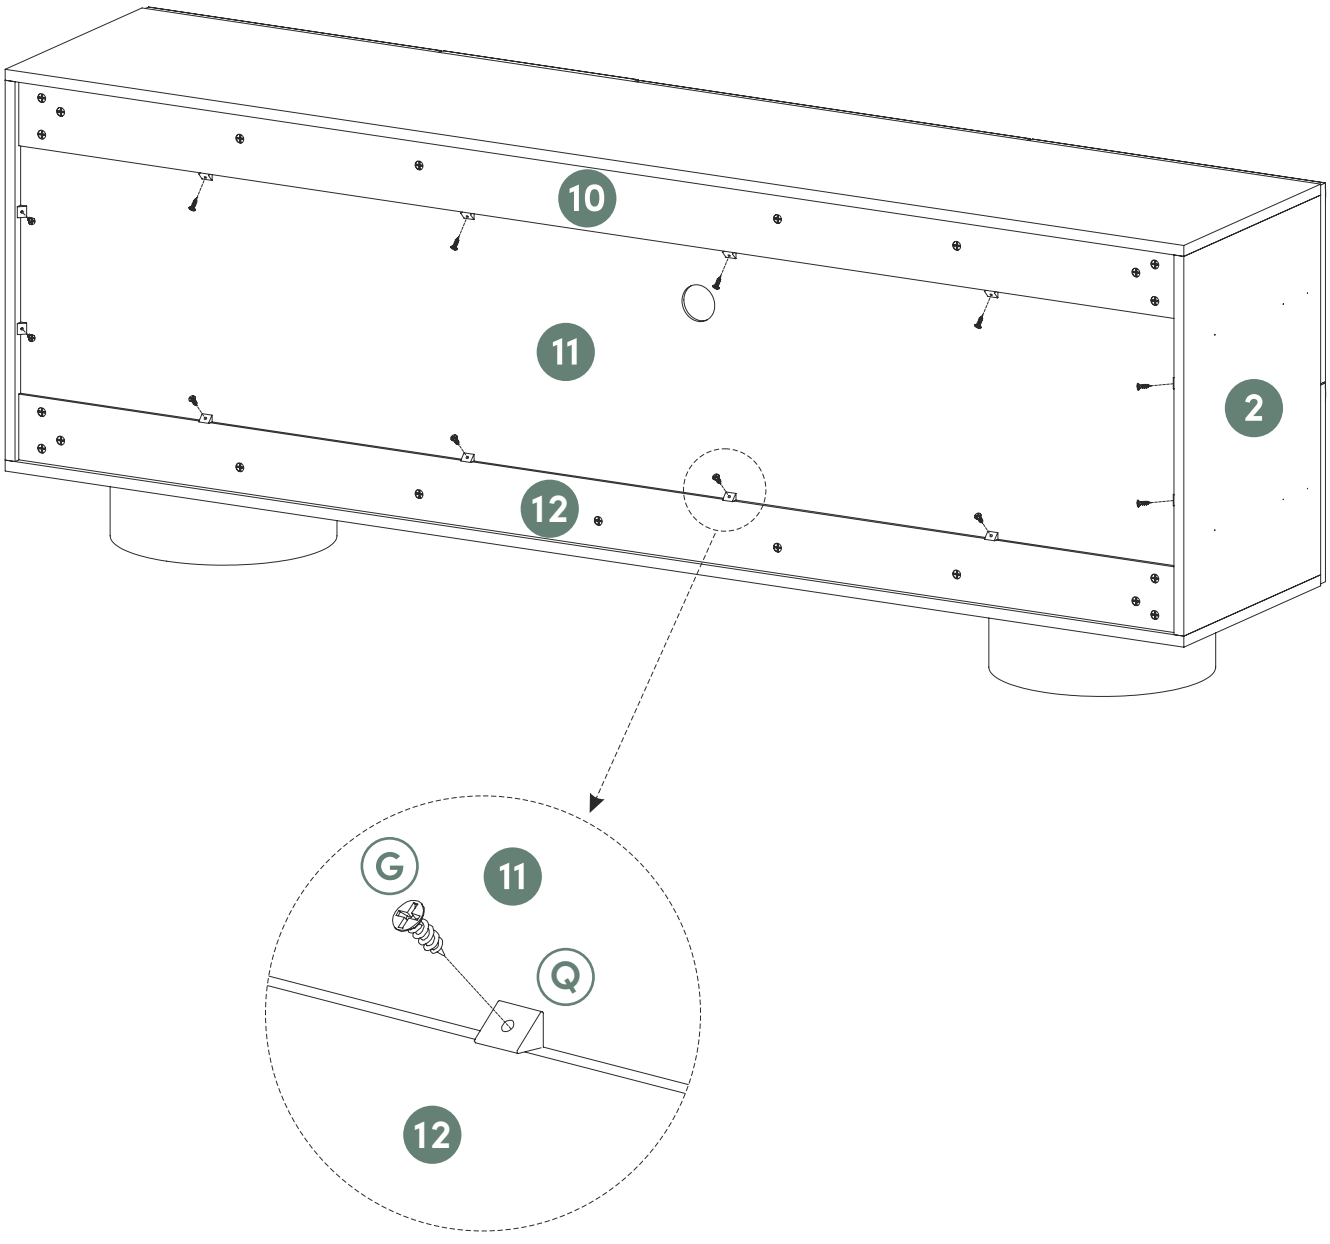


YOU WILL NEED		
Q		x12
G		x12


ASSEMBLY STEPS


STEP 23

Self provided tools

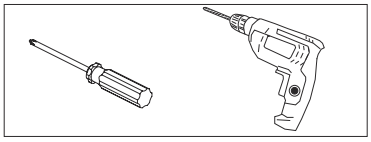



1

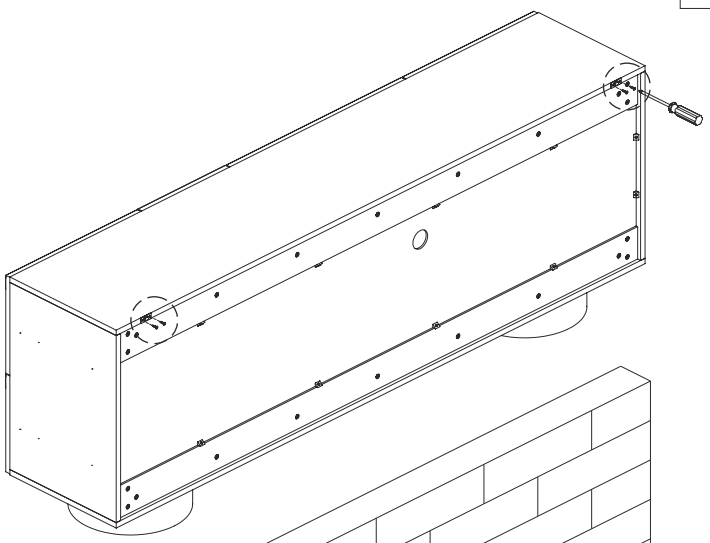


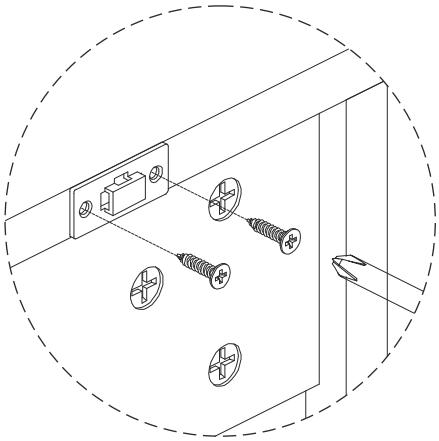


2

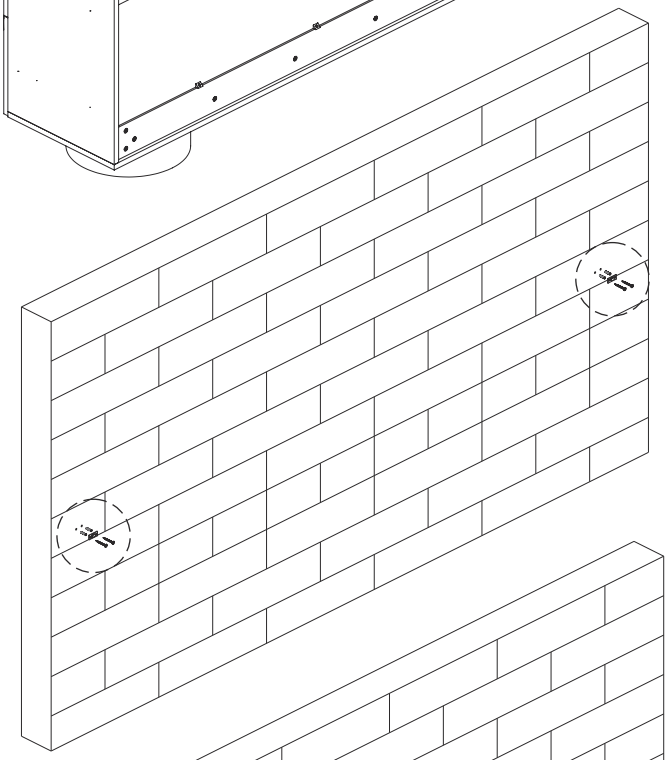


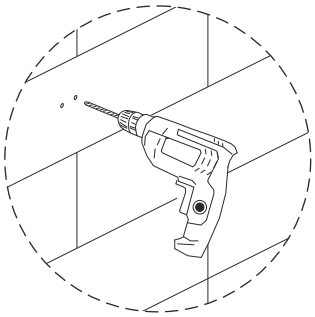

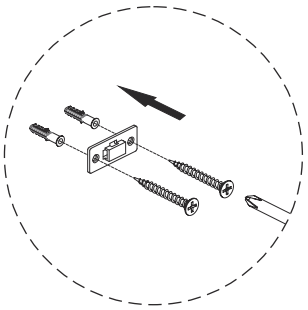


3

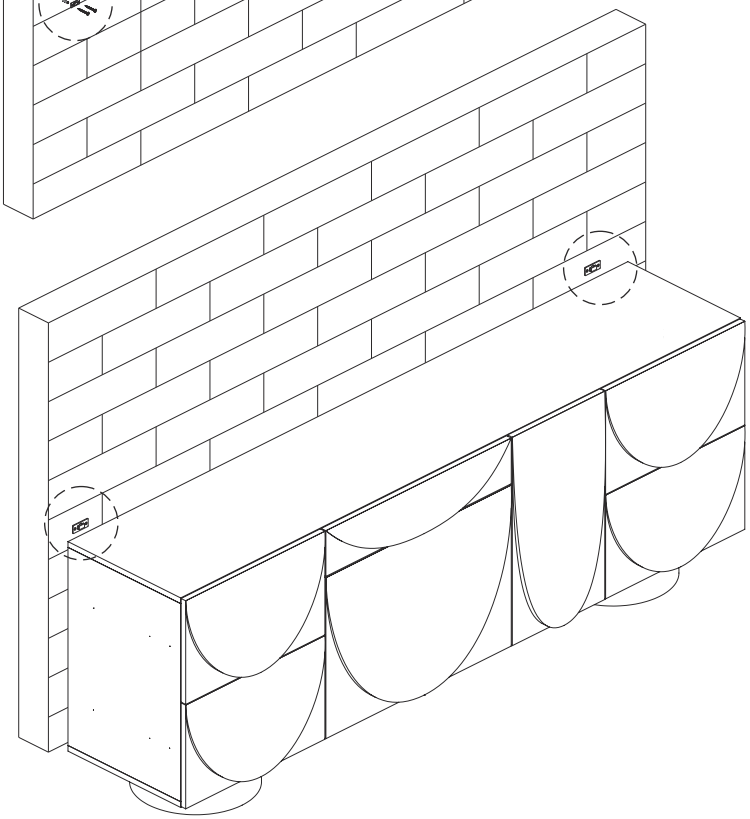

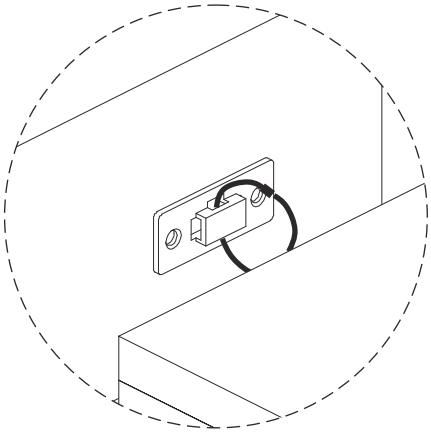


YOU WILL NEED

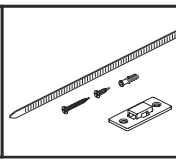
H	 x2

ASSEMBLY STEPS


GREAT JOB. YOU'RE DONE!

To move the assembled unit, please lift it up and do not drag to avoid damaging the middle part.

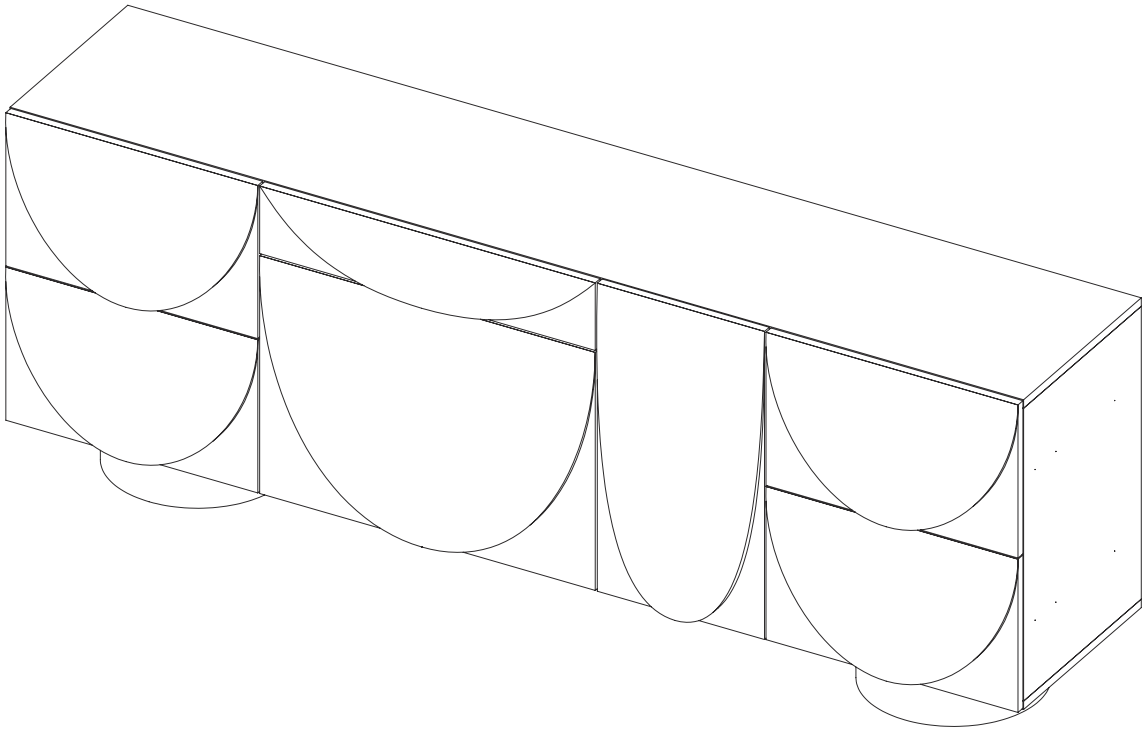

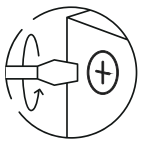

When you assemble this TV Unit, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



The TV Unit top can hold weight of up to 60kg. Each shelf can hold weight of up to 15kg. Each drawer can hold weight of up to 15kg. We don't suggest overloading them beyond their weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a soft, damp cloth and mild soap solution to wipe down surfaces regularly.

Temperature and Humidity

Keep away from heat sources like stoves and heaters. Avoid direct sunlight and prolonged exposure to high humidity/water. Maintain a consistent room temperature and humidity level.

Use Furniture Pads

Place furniture pads or felt protectors under furniture legs to prevent scratches on floors

Avoid Excessive Weight


Don’t overload the shelves or tabletop beyond their weight capacity.

Again, we thank you for your purchase.
You’ve made our day, and we hope you have a great one too!
Enjoy our product!

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Furniture

⚠ WARNING

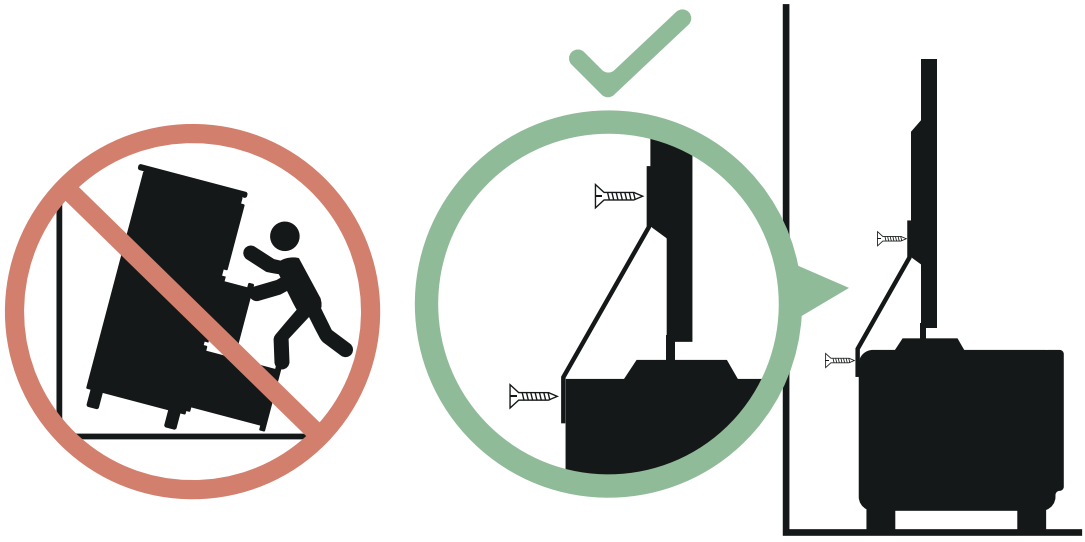

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

This is a permanent label. Do not remove!